

# **BLUE SEAL®**

## **EVOLUTION** **SERIES**

**INSTALLATION AND OPERATION MANUAL**

# **GAS PASTA COOKER**

**G47**




Date Purchased \_\_\_\_\_

Serial Number \_\_\_\_\_

Dealer \_\_\_\_\_

Service Provider \_\_\_\_\_

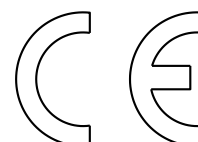

---

## MANUFACTURED BY

**Moffat Limited**  
Rolleston 7675  
New Zealand

## INTERNATIONAL CONTACTS

### AUSTRALIA

**Moffat Pty Limited**  
**E.Mail:** vsales@moffat.com.au  
**Main Office:** (tel): +61 (03) 9518 3888  
(fax): +61 (03) 9518 3833  
**Service:** (tel): 1800 622 216  
**Spares:** (tel): 1800 337 963  
**Customer Service:** (tel): 1800 335 315  
(fax): 1800 350 281

### CANADA

**Serve Canada**  
**Web:** www.servecanada.com  
**E.Mail:** info@servecanada.com  
**Sales:** (tel): 800 551 8795 (Toll Free)  
**Service:** (tel): 800 263 1455 (Toll Free)

### NEW ZEALAND

**Moffat Limited**  
**Web:** www.moffat.co.nz  
**E.Mail:** sales@moffat.co.nz  
**Main Office:** (tel): 0800 663328

### UNITED KINGDOM

**Blue Seal**  
**Web:** www.blue-seal.co.uk  
**E.Mail:** sales@blue-seal.co.uk  
**Sales:** (tel): +44 121 327 5575  
(fax): +44 121 327 9711  
**Spares:** (tel): +44 121 322 6640  
(fax): +44 121 327 9201  
**Service:** (tel): +44 121 322 6644  
(fax): +44 121 327 6257

### UNITED STATES

**Moffat**  
**Web:** www.moffat.com  
**Sales:** (tel): 1-800 551 8795 (Toll Free)  
(tel): 336 661 1556  
(fax): 336 661 9546  
**Service:** (tel): 866 673 7937 (Toll Free)

### REST OF WORLD

**Moffat Limited**  
**Web:** www.moffat.co.nz  
**E.Mail:** export@moffat.co.nz

---

The reproduction or copying of any part of this manual by any means whatsoever is strictly forbidden unless authorized previously in writing by the manufacturer.

In line with policy to continually develop and improve its products, Moffat Ltd. reserves the right to change the specifications and design without prior notice.

© Copyright Moffat Ltd. November 2025.

---

**G47     GAS PASTA COOKER - (Single Tank - 40 Ltr)**

|                                                |           |
|------------------------------------------------|-----------|
| <b>Introduction .....</b>                      | <b>2</b>  |
| <b>Specifications .....</b>                    | <b>3</b>  |
| Model Numbers Covered in this Specification    |           |
| General                                        |           |
| Optional Accessories                           |           |
| Gas Supply Requirements                        |           |
| Gas Connection                                 |           |
| Water Supply Requirements                      |           |
| <b>Dimensions .....</b>                        | <b>5</b>  |
| <b>Installation .....</b>                      | <b>6</b>  |
| Installation Requirements                      |           |
| Unpacking                                      |           |
| Location                                       |           |
| Clearances                                     |           |
| Assembly                                       |           |
| Gas Connection                                 |           |
| Water Connection                               |           |
| Drainage Connection                            |           |
| Commissioning                                  |           |
| <b>Operation.....</b>                          | <b>10</b> |
| Operation Guide                                |           |
| Description of Controls                        |           |
| Before Use                                     |           |
| Filling the Tank                               |           |
| Lighting the Pilot Burner                      |           |
| Lighting the Main Burner                       |           |
| Turning 'OFF' the Pasta Cooker                 |           |
| <b>Cleaning and Maintenance .....</b>          | <b>13</b> |
| General                                        |           |
| Draining and Cleaning                          |           |
| After Each Use                                 |           |
| Daily Cleaning                                 |           |
| Weekly Cleaning                                |           |
| Periodic Maintenance                           |           |
| <b>Fault Finding.....</b>                      | <b>16</b> |
| <b>Wiring Schematic .....</b>                  | <b>17</b> |
| <b>Gas Conversion and Specifications .....</b> | <b>18</b> |
| Conversion Procedure                           |           |
| Gas Specifications                             |           |
| <b>Replacement Parts List .....</b>            | <b>22</b> |

---

## Introduction

---

We are confident that you will be delighted with your BLUE SEAL Pasta Cooker and it will become a most valued appliance in your commercial kitchen.

To ensure you receive the utmost benefit from your new BLUE SEAL Appliance, there are two important things you can do.

### Firstly:

Please read the instruction book carefully and follow directions given. The time taken will be well spent.

### Secondly:

If you are unsure of any aspect of the installation, instructions or performance of your appliance, contact your BLUE SEAL dealer promptly. In many cases a phone call could answer your question.

### CE Only:

These instructions are only valid if the country code appears on appliance. If code does not appear on appliance, refer to supplier of this appliance to obtain technical instructions for adapting appliance to conditions for use in that country.



#### Warning

**IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS APPLIANCE.**



#### Warning

**INSTRUCTIONS TO BE FOLLOWED IN THE EVENT THE USER SMELLS GAS ARE TO BE POSTED IN A PROMINENT LOCATION. THIS INFORMATION SHALL BE OBTAINED BY CONSULTING THE LOCAL GAS SUPPLIER.**



#### Warning

**GREAT CARE MUST BE TAKEN BY THE OPERATOR TO USE THE EQUIPMENT SAFELY TO GUARD IT AGAINST RISK OF FIRE.**

- **THE APPLIANCE MUST NOT BE LEFT ON UNATTENDED.**
- **IT IS RECOMMENDED THAT A REGULAR INSPECTION IS MADE BY A COMPETENT SERVICE PERSON TO ENSURE CORRECT AND SAFE OPERATION OF YOUR APPLIANCE IS MAINTAINED.**
- **DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPOURS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.**
- **DO NOT SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.**



#### Caution

- **This appliance is for professional use and is only to be used by qualified persons.**
- **Only authorised service persons are to carry out installation, servicing or gas conversion operations.**
- **Components having adjustments protected (e.g. paint sealed) by the manufacturer should not be adjusted by the user / operator.**
- **DO NOT operate the appliance without the legs supplied fitted.**

## Model Numbers Covered in this Specification

**G47 PASTA COOKER (Single Tank - 40 Ltr).**

### General

A commercial heavy duty, gas fired high performance Pasta Cooker designed for pasta cooking commercial high production output, using LPG (Propane) or Natural Gas. The boiling medium is contained within a heavy gauge stainless steel tank, heated by one infra red surface burner from beneath the tank.

This Pasta Cooker features an Over Temperature Safety Cut Out System with Full Flame Failure Safety Controls.

An open tank design to make cleaning a simple and easy task.

### Optional Accessories

This appliance can be fitted with the following optional accessories, (refer to the 'Replacement Parts List' for details).

- Plinth Kit.
- Basket 1/4, 165 x 165mm.
- Basket 1/4, 165 x 165mm.
- Basket 1/2, 320 x 165mm.

### Gas Supply Requirements

#### - Australia:

|                               | Natural Gas     | LP Gas / (Propane) |
|-------------------------------|-----------------|--------------------|
| Input Rating (N.H.G.C.)       | 46 MJ/hr        | 47 MJ/hr           |
| Supply Pressure               | 1.13 - 3.40 kPa | 2.75 - 4.50 kPa    |
| Burner Operating Pressure (*) | 0.92 kPa        | 2.6 kPa            |
| Gas Connection                | 3/4" BSP Male   |                    |

#### - New Zealand:

|                               | Natural Gas     | LP Gas          |
|-------------------------------|-----------------|-----------------|
| Input Rating (N.H.G.C.)       | 46 MJ/hr        | 47 MJ/hr        |
| Supply Pressure               | 1.13 - 3.40 kPa | 2.75 - 4.50 kPa |
| Burner Operating Pressure (*) | 0.92 kPa        | 2.6 kPa         |
| Gas Connection                | 3/4" BSP Male   |                 |

#### - UK Only:

Category: **II<sub>2</sub>H3P.**  
Flue Type: **A<sub>1</sub>.**

|                               | Natural Gas (G20) |            | Propane (G31) |            |
|-------------------------------|-------------------|------------|---------------|------------|
|                               | Nominal           | Reduced    | Nominal       | Reduced    |
| Heat Input (nett)             | 11.5 kW           | 5.4 kW     | 12.5 kW       | 6.2 kW     |
| Gas Rate                      | 1.22 m³/hr        | 0.42 m³/hr | 0.97 kg/hr    | 0.48 kg/hr |
| Supply Pressure               | 20 mbar           |            | 37 mbar       |            |
| Burner Operating Pressure (*) | 9.5 mbar          |            | 27.7 mbar     |            |
| Gas Connection                | 3/4" BSP Male     |            |               |            |

**NOTE: (\*)** Measure burner operating pressure at upper test point (Supply Pressure) on gas control valve located behind control panel, this is to be carried out with burner operating at 'High Flame' setting. Refer to 'Gas Conversion and Specification' Section for further details.

## Specifications

---

### - All Other Markets:

|                               | Natural Gas     | LP Gas (Propane) | Butane          |
|-------------------------------|-----------------|------------------|-----------------|
| Input Rating (N.H.G.C.)       | 46 MJ/hr        | 47 MJ/hr         | 47 MJ/hr        |
| Supply Pressure               | 1.13 - 3.40 kPa | 2.75 - 4.50 kPa  | 2.75 - 4.50 kPa |
| Burner Operating Pressure (*) | 0.92 kPa        | 2.6 kPa          | 2.6 kPa         |
| Gas Connection                | 3/4" BSP Male   |                  |                 |

#### NOTE:

- (\*) Measure burner operating pressure at Burner Operating Pressure test point on gas control valve, with burner operating at 'High Flame' setting.
- NAT, LPG & Butane Only - Operating pressure is ex-factory set and is not to be adjusted, apart from when converting between gasses, if required.
- Standard models can only be converted between Nat. Gas, LP Gas and Butane, but not Town Gas.
- Refer to 'Gas Conversion and Specifications' section in this manual for further details.

### Gas Connection

Gas supply connection point is located 152mm from left hand side, 36mm from rear of appliance, 124mm from floor and is entered from beneath appliance. An optional rear connection is available.

Connection is 3/4" BSP male.

### Water Supply Requirements




A cold water supply must be connected to water inlet connection (1/2" (12.7mm) O/D Copper Tube), located 70mm from LH side, 559mm from rear and 118mm from floor. Water connection should be plumbed in, in accordance with National / Local Codes covering installation.

**Maximum water supply pressure 550 kPa (80psi).**

**Tank max capacity - 40ltrs of water.**

G47-Pasta Cooker

G47

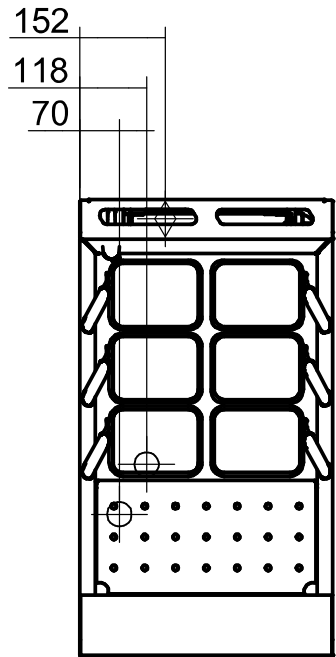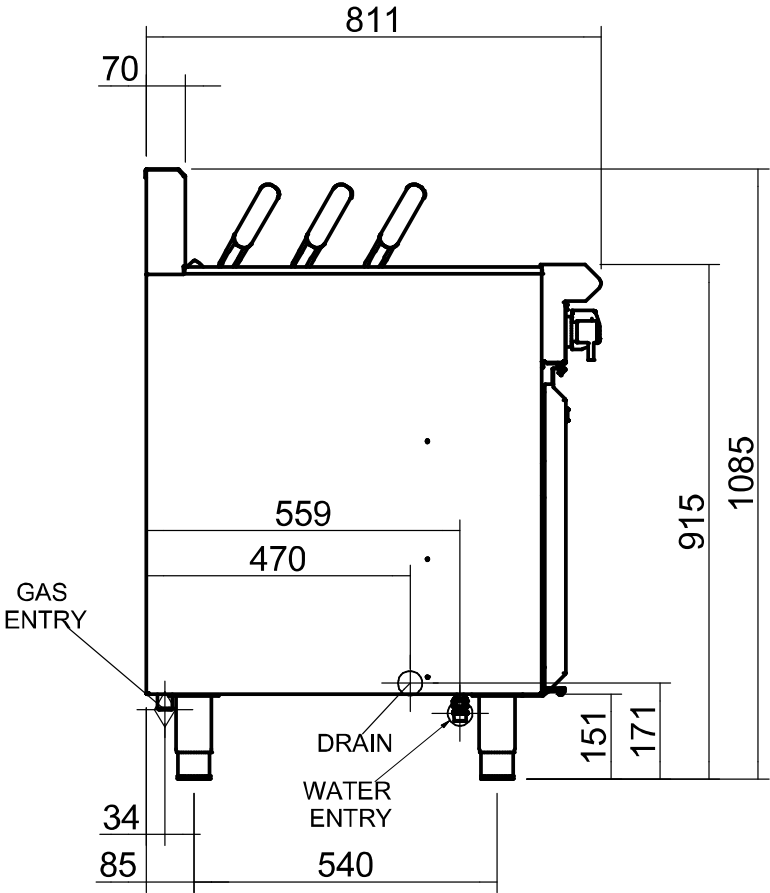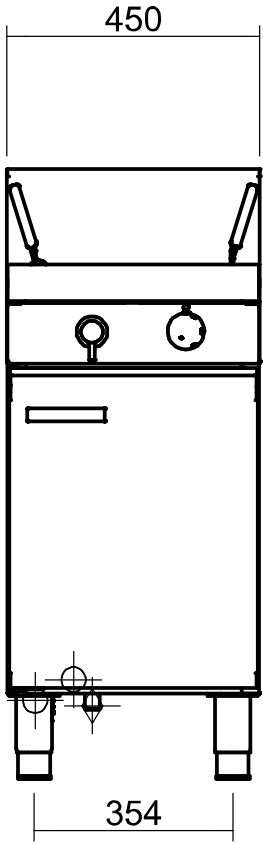

# Installation

## Installation Requirements

### NOTE:

- It is most important that this appliance is installed correctly and that operation is correct before use. Installation shall comply with local, gas, health and safety requirements.
- This appliance shall be installed with sufficient ventilation to prevent the occurrence of unacceptable concentrations of health harmful substances in the room, appliance is installed in.

Blue Seal pasta cookers are designed to provide years of satisfactory service and correct installation is essential to achieve the best performance, efficiency and trouble-free operation.

This appliance must be installed in accordance with National installation codes and in addition, in accordance with relevant National / Local codes covering gas and fire safety.

|                                 |                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Australia / New Zealand:</b> | - AUS/NZS5601 - Gas Installations.<br>- AUS/NZS3500 - Plumbing & Drainage.                                                                                           |
| <b>United Kingdom:</b>          | - Gas Safety (Installation & Use) Regulations 1998.<br>- BS6173 - Installation of Catering Appliances.<br>- BS5440 - Parts 1 & 2 Installation Flueing & Ventilation. |
| <b>Ireland:</b>                 | - IS 820 - Non Domestic Gas Installations.                                                                                                                           |

**Installations must be carried out by qualified service persons only. Failure to install equipment to the relevant codes and manufacturer's specifications shown in this section will void the warranty.**

**Components having adjustments protected (e.g. paint sealed) by manufacturer, are only to be adjusted by an authorised service agent. They are not to be adjusted by the installation person.**

## Unpacking

- Remove all packaging and transit protection from appliance including all protective plastic coating from door outer panel and exterior stainless steel panels.
- Check equipment and parts for damage. Report any damage immediately to carrier and distributor.
- Report any deficiencies to distributor who supplied appliance.
- Check available gas supply is correct to that shown on rating plate located on inside of access door.
- Check the following parts have been supplied with appliance:

### G47

|                          |   |
|--------------------------|---|
| Baskets 1/6, 165 x 125mm | 6 |
| Basket Support Frame     | 1 |

## Location

1. This appliance must be installed in a suitably ventilated room to prevent dangerous build up of combustion products.
2. Installation must allow for sufficient flow of fresh air for combustion air supply.

| Combustion Air Requirements: |                      |
|------------------------------|----------------------|
| <b>Natural Gas</b>           | 12m <sup>3</sup> /hr |
| <b>LPG</b>                   | 12m <sup>3</sup> /hr |

3. Position appliance in its approximate working position.
4. All air for burner combustion is supplied from underneath appliance. Legs must always be fitted and no obstructions placed on underside or around base of appliance, as obstructions will cause incorrect operation and / or failure of appliance.
5. Components having adjustments protected (e.g. paint sealed) by manufacturer are only to be adjusted by an authorised service agent. They are not to be adjusted by installation person.

**NOTE: Do not obstruct or block appliances flue. Never directly connect a ventilation system to appliance flue outlet.**

## Clearances

### NOTE:

- Only non-combustible materials can be used in close proximity to this appliance.
- In order to facilitate easy operation, drainage and servicing of appliance, a minimum of 600mm clearance should be maintained at front of appliance.

Any gas burning appliance requires adequate clearance and ventilation for optimum and trouble-free operation. The following minimum installation clearances are to be adhered to:

|                        | Combustible Surface | Non Combustible Surface |
|------------------------|---------------------|-------------------------|
| Left / Right Hand Side | 50mm                | 0mm                     |
| Rear                   | 50mm                | 0mm                     |

## Assembly

This model is delivered completely assembled. Ensure adjustable feet are securely attached.

### NOTE:

- This appliance is fitted with adjustable feet to enable appliance to be positioned securely and level. This should be carried out on completion of gas connection. Refer to 'Gas Connection' section below.

### Optional Accessories (Refer to Replacement Parts List)

- Plinth Kit. For installation details, refer to instructions supplied with each kit.

## Gas Connection

**NOTE: ALL GAS FITTING MUST ONLY BE CARRIED OUT BY A QUALIFIED SERVICE PERSON.**

1. Blue Seal Pasta Cookers do not require an electrical connection, they function totally on gas supply only.
2. It is essential that gas supply is correct for appliance to be installed and that adequate supply pressure and volume are available. The following checks should be made before installation:-
  - a. **Gas Type** appliance has been supplied for is shown on coloured stickers located above gas entry point and on rating plate. Check that this is correct for gas supply appliance is being installed for. Gas conversion procedure is detailed in this manual.
  - b. **Supply Pressure** required for this appliance is shown in 'Specifications' section of this manual. Check gas supply to ensure that adequate supply pressure exists.
  - c. **Input Rate** of this appliance is also shown on Rating Plate fitted to inside of access door and in 'Specifications' section of this manual. Input rate should be checked against available gas supply line capacity. **Particular note should be taken if appliance is being added to an existing installation.**



Fig 1

**NOTE: It is important that adequately sized piping runs directly to connection joint on appliance, with as few tees and elbows as possible to give maximum supply volume.**

3. Fit gas regulator supplied, into gas supply line as close to appliance as possible.

**NOTE: Gas pressure regulator provided with this appliance is convertible between Natural Gas and LPG as per 'Gas Conversion Section' in this manual. Ensure regulator is converted to correct gas type that appliance will operate on. Regulator outlet pressure is fixed ex-factory for gas type that regulator is converted to and it is NOT to be adjusted.**

Regulator connections are  $\frac{3}{4}$ " BSP female.  
Connection to appliance is  $\frac{3}{4}$ " BSP male.  
(Refer to 'Specifications' section for gas supply location dimensions).

## Installation

**NOTE: A Manual Isolation Valve must be fitted to individual appliance supply line.**

4. Correctly locate appliance into its final operating position and using a spirit level, adjust legs so that appliance is level and at correct height.
5. Connect gas supply to appliance.
6. Check gas operating pressure is as shown in the 'Specifications' section. If pressure is incorrect, adjust pressure by adjusting gas control valve regulator screw as shown in 'Gas Conversion and Specifications' section.
7. Check all gas connections for leakages using soapy water or other gas detecting equipment.




### Warning

**DO NOT USE A NAKED FLAME TO CHECK FOR GAS LEAKAGES.**

**NOTE: Measure operating pressure at Burner Operating Pressure test point on gas control valve, this is to be carried out with burner operating at 'High Flame' setting. Operating pressure is ex-factory set, through appliance regulator and not to be adjusted, apart from when carrying out gas conversion, if required. Refer to 'Gas Conversion and Specification' Section for further details.**

8. Verify operating pressure remains correct
9. Check pilot flame size. (Re-adjust if required, using low fire adjustment screw as shown in 'Gas Conversion and Specifications' section).

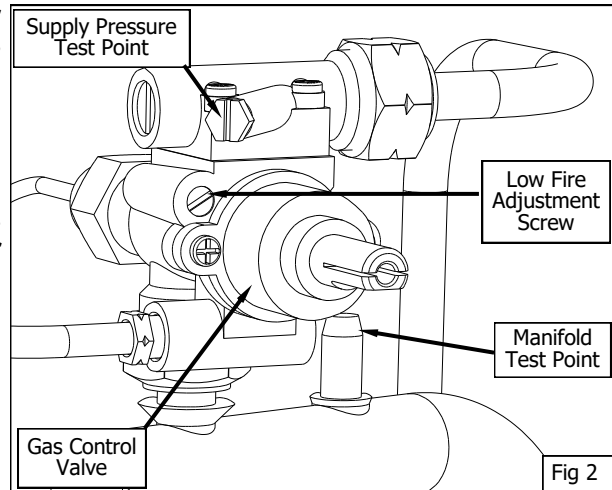

## Water Connection

**NOTE: Water connection shall be installed in accordance with local water regulations in force and the applicable standard / code, e.g.: PCA in Australia, EN 1717 in UK / IE.**

A cold water supply must be connected to water inlet connection ( $\frac{1}{2}$ " (12.7mm) O/D Copper Tube), located 70mm from LH side, 559mm from rear and 118mm from floor.

Water inlet pressure must be as follows:-

Maximum water supply pressure - 550 kPa (80 psi).  
Maximum water supply temperature - 80°C.

## Drainage Connection

- Water is drained from appliance by means of a valve located behind front control panel.
- A waste water tundish must be fitted below the appliance drain outlet. This should be a minimum of 127 mm (5") major diameter.
- If required the drain outlet can be extended in order to exit above the tundish. All drain piping must be with materials suitable for conveying boiling water.
- Drain connection is R1" BSP drain / overflow.
- Water backflow protection (WMTS-101 compliant) is incorporated in this appliance.

### Commissioning

**The following commissioning checks must be carried out before pasta cooker is handed over for use, to ensure the unit operates correctly and operator(s) understand correct operating procedure.**

1. Before leaving new installation;
  - a. Check the following functions in accordance with operating instructions specified in 'Operation' section of this manual.
    - Light the Pilot Burner.
    - Light the Main Burner.
  - b. Ensure that each operator has been instructed in areas of correct lighting, operation, and shutdown procedures for appliance.
2. This manual must be kept by owner for future reference and a record of ***Date of Purchase, Date of Installation*** and ***Serial Number of Unit*** recorded and kept with this manual. **(These details can be found on Rating Plate attached to inner R/H side of front access door panel. Refer to Figure 1 in 'Installation' section).**

**NOTE:** If for some reason it is not possible to get appliance to operate correctly, shut *Off* gas supply and contact supplier of this unit.

# Operation

## Operation Guide



### Caution

- **This appliance is for professional use and is only to be used by qualified persons.**
- **Only authorised service persons are to carry out installation, servicing or gas conversion operations.**
- **Components having adjustments protected (e.g. paint sealed) by the manufacturer should not be adjusted by the user / operator.**

1. Blue Seal 'Pasta Cookers have been designed to provide simplicity of operation and 100% safety protection.



### Warning


**NEVER OPERATE APPLIANCE WITH GAS CONTROL VALVE BETWEEN 'HIGH' FLAME AND 'PILOT' POSITION.**

2. Improper operation is almost impossible, however bad operation practices can produce a poor quality product. To use this pasta cooker correctly please read the following sections carefully;
  - Filling the Tank with Water.
  - Lighting the Pilot Burner.
  - Lighting the Main Burner.
  - Draining and Cleaning.

## Description of Controls

- A commercial heavy duty, gas fired pasta cooker using a fast fry infra red burner system.
- Available in single model type.
- This model is fitted with single main burner and pilot burner and is controlled by a single gas controller with flame failure protection to control both main burner and pilot.
- Open tank design to simplify cleaning operation.

### G47 Pasta Cooker Controls

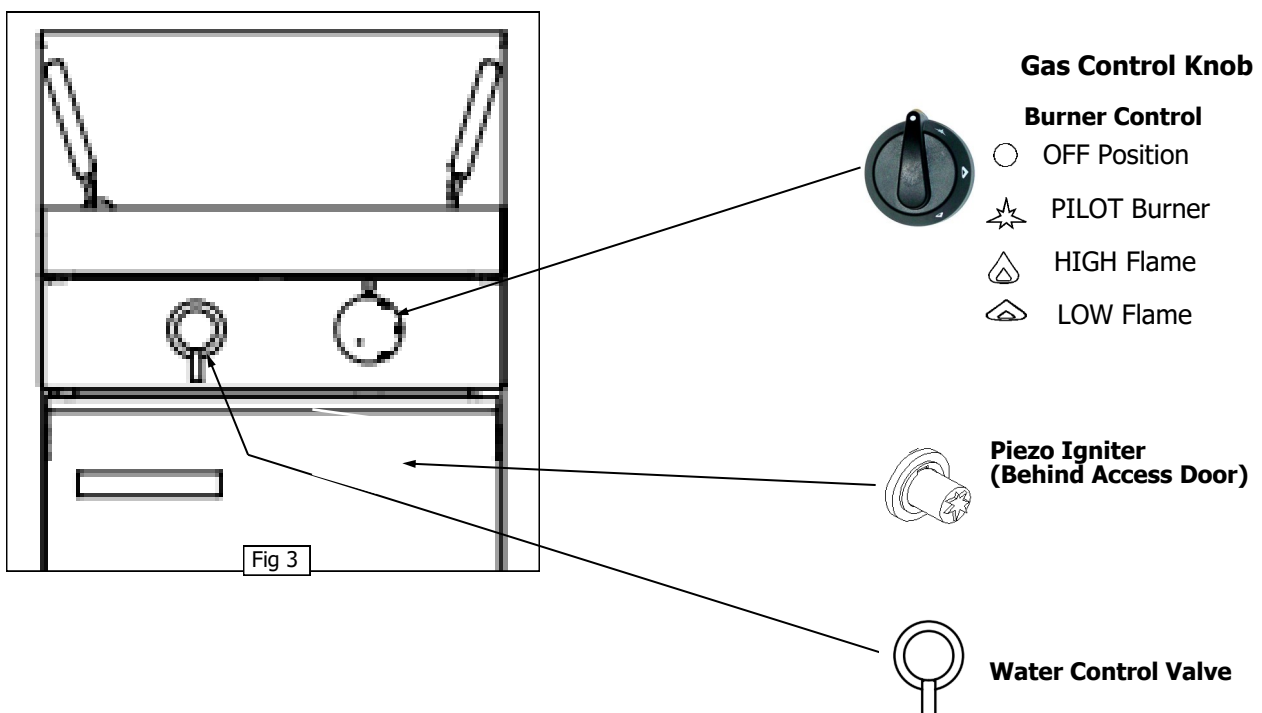

### Before Use



#### Warning

**GREAT CARE MUST BE TAKEN BY OPERATOR, TO USE THE PASTA COOKER SAFELY, TO GUARD AGAINST RISK OF INJURY AND FIRE.**

- **DO NOT LEAVE PASTA COOKER UNATTENDED DURING OPERATION.**
- **DO NOT OVER FILL WATER IN PASTA COOKER ABOVE UPPER FILL LEVEL MARK.**
- **DO NOT ALLOW WATER IN PASTA COOKER TO FALL BELOW LOWER LEVEL MARK.**
- **DO NOT USE FLAMMIBLE SOLVENTS AND CLEANING AIDS ON OR IN CLOSE PROXIMITY TO PASTA COOKER WHILST PASTA COOKER IS STILL HOT.**



#### WARNING

**DO NOT ATTEMPT TO MOVE THE PASTA COOKER WHILST THE PASTA COOKER IS FULL OF WATER.**


1. Check gas supply is turned **On**.
2. Check that no foreign articles are in the tank.



#### Warning

**DANGER OF FIRE EXISTS IF WATER LEVEL IS BELOW MINIMUM 'LOW' INDICATED LEVEL.  
NEVER OPERATE THE APPLIANCE EMPTY.**

### Filling the Tank

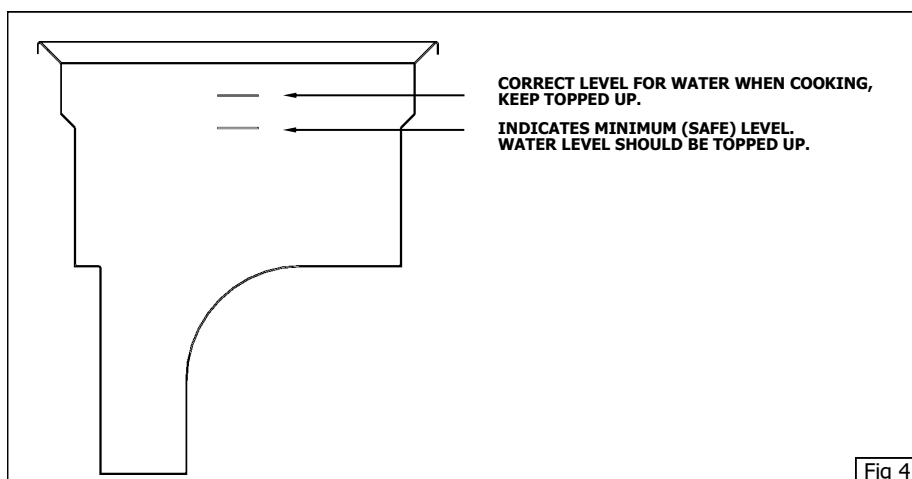

**NOTE: Tank capacity - 40 Ltrs of water.**

1. Before filling tank, always check drain valve behind door is closed. A locking slide is provided on valve and this should always be locked in position during use.
2. Turn water supply **On**. Open appliance water valve and fill tank with water.
3. Water level will remain at a constant height as there is an overflow at front of tank.
4. During cooking, water level will reduce as it evaporates as steam when boiling and when it overflows as loaded baskets are dropped into tank.
5. To maintain correct water level, water tap should be adjusted to give a water flow out of water supply nozzle that just causes water to continually flow out of overflow.

This method provides:

- Maintained water level for cooking.
- Skimming or flushing effect to prevent the cooking water becoming gummed up with pasta residue.

## Operation

---

### Lighting Pilot Burner



#### Caution

**Do NOT ignite burner if tank is empty (No Water). Ensure tank is filled to correct level before igniting main burner.**

1. With pasta cooker tank full of water, pilot burner can be lit.
2. Check gas supply is turned **On** at mains supply.
3. Depress and rotate gas control knob to 'Pilot' position and hold knob depressed.
4. Open front access door of appliance and depress piezo igniter, located on bulkhead panel, until pilot burner ignites.
5. Continue holding gas control knob depressed for approx. 10 to 15 seconds after igniting pilot burner, then release, pilot burner should remain alight.
6. Ensure pilot burner is alight, by checking that pilot flame is alight with access door open.
7. If pilot burner does not ignite, repeat Items 1 to 6 above.

### Lighting Main Burner

1. Depress and rotate gas control knob to **High Flame** position, main burner will ignite automatically off pilot burner.
2. Gas control knob can be regulated between **High Flame** and **Low Flame** position to regulate cooking temperature.
3. It will take approximately 30 minutes to heat water in tank from 20°C to 100°C.

#### IMPORTANT:

- **THE USE OF ROCK SALT IS NOT PERMITTED IN THIS MACHINE .**
- **NEVER add salt to cold water - always ensure that the water in the pasta cooker is boiling before adding salt.**
- **Clean the pan regularly after each use.**

### Turning 'Off' the Pasta Cooker

#### To the 'Pilot' Position

- a. Depress and rotate gas control valve clockwise to **Pilot** position.
- b. Main burner will extinguish and **Pilot** will remain alight.

#### To the 'Off' Position

- a. Depress and rotate gas control valve fully clockwise to **Off** position.
- b. Pilot burner will extinguish.

### General

Clean the pasta cooker regularly. A clean pasta cooker looks better, will last longer and will perform better. A dirty pasta cooker will hinder transfer of heat from cooking surface to food. This will result in loss of cooking efficiency.



#### Warning

**DO NOT USE FLAMMIBLE SOLVENTS AND CLEANING AIDS ON OR IN CLOSE PROXIMITY OF PASTA COOKER WHILST COOKER IS STILL HOT.**



#### Caution

**Always turn 'Off' gas supply before cleaning.**

**This appliance is not water proof.**

**Do not use water jet spray to clean interior or exterior of this appliance.**



#### Caution

**If cleaning detergents enter inner parts of appliance, rusting will occur on pipe work, installation elements, heating elements, gas fittings and electrical components, this will cause premature failure of appliance.**

#### NOTE:

- **DO NOT clean appliance using high pressure water or steam jets.**
- **DO NOT pour water directly over appliance.**
- **DO NOT use wire brushes. Clean pan regularly after each use.**
- **DO NOT use combustible liquids to clean appliance.**
- **DO NOT use harsh abrasive detergents, sharp scrapers, strong solvents or caustic detergents as they will damage appliance.**
- **DO NOT use any chloric or bleaching detergents to clean appliance.**
- **Ensure that any detergent or cleaning material have been completely removed after each cleaning.**
- **DO NOT use saline or sulfuric acid preparations for descaling the appliance.**
- **Ensure that protective gloves are worn during the cleaning process.**
- **Clean the pan regularly after each use.**

## Cleaning and Maintenance

### Draining and Cleaning



#### Opening the Drain Valve



#### Warning

**HOT WATER WILL SCALD - DO NOT RUSH THIS JOB.**

- Lift locking slide on valve handle (Fig 5) to release valve.
- While holding locking slide in withdrawn position, rotate handle anticlockwise (Fig 6) to open valve.
- When valve is closed, slide locking slide down over locking valve, as shown in Fig.5, to prevent accidental opening of valve.

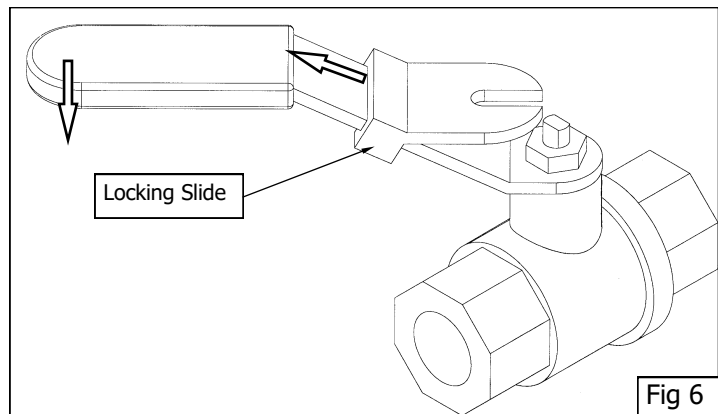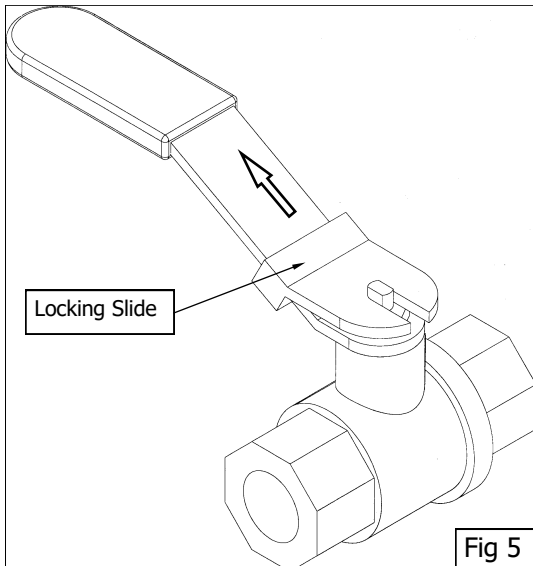

#### After Each Use



#### Warning

**DO NOT ATTEMPT TO MOVE PASTA COOKER WHILST COOKER IS FULL OF WATER.**

**BEFORE ATTEMPTING TO MOVE PASTA COOKER, ENSURE THAT ALL WATER HAS BEEN DRAINED FROM TANK. REFER TO INFORMATION ABOVE, ON HOW TO DRAIN WATER FROM PASTA COOKER.**

- Clean interior of pan regularly after each use. Do not use wire brushes on pan. Clean using a mild detergent and a hot water solution using soft cloth or a soft bristled brush. Dry appliance thoroughly using a dry clean cloth.

#### Daily Cleaning

- Water should be drained and re-filled regularly. Open drain valve slowly to minimise splashing. Waste water will drain into tundish fitted below appliance drain outlet.
- When tank is empty, open drain valve fully and check for any particles or residue lodged in valve. Clean out valve with a stiff nylon brush. Do not use wire brush or metal rods as these damage valve seating and will eventually lead to valve leakage.
- If obstruction in valve cannot be removed with a brush, use a wooden probe to dislodge any obstruction.
- Clean control panel using a damp cloth lightly moistened with a solution of mild detergent and hot water. Dry control panel thoroughly using a dry clean cloth.
- At the end of each day or at end of each shift,
  - Clean the interior and exterior of the pasta cooker using a mild detergent and a hot water solution using soft cloth or a soft bristled brush. Do not use wire brushes on the pan. Dry the appliance thoroughly using a dry clean cloth.
  - Clean the pasta / noodle baskets using a mild detergent and hot water solution using a soft cloth or a soft bristled brush. Rinse in fresh water and thoroughly dry using a dry clean cloth.
- Once the daily cleaning operation is completed, ensure that the drain valve has been closed.

### Weekly Cleaning



#### Warning

**DO NOT ATTEMPT TO MOVE PASTA COOKER WHILST COOKER IS FULL OF WATER.**

**BEFORE ATTEMPTING TO MOVE PASTA COOKER, ENSURE THAT ALL WATER HAS BEEN DRAINED FROM TANK. REFER TO INFORMATION ON PREVIOUS PAGE ON HOW TO DRAIN WATER FROM PASTA COOKER.**

#### NOTE:

- If pasta cooker usage is very high, we recommend that weekly cleaning procedure is carried out more frequently.
- Ensure protective gloves are worn during cleaning.
- **DO NOT** use harsh abrasive detergents, strong solvents, sharp scrapers or caustic detergents as they will damage surface of pasta cooker.
- Ensure that the water circuit is free of ferrous particles. Any such particles deposited in the bottom of the tank may cause it to rust.

Thoroughly clean the interior and exterior of the pasta cooker regularly. Do not use wire brushes on the pan. Clean using a mild detergent and a hot water solution using soft cloth or a soft bristled brush. Dry the appliance thoroughly using a dry clean cloth.

**NOTE:** In order to prevent the forming of rust on the steel components, ensure that the detergent or cleaning material has been entirely removed after each cleaning process.

#### Stainless Steel Surfaces

- a. Clean the interior and exterior surfaces of the pasta cooker with hot water, a mild detergent solution and a soft scrubbing brush. Note that the gas control knobs are a push fit onto the gas and water control valve spindles and can be removed to allow cleaning of the front of the control panel.
- b. Baked on deposits or discolouration may require a good quality stainless steel cleaner or stainless steel wool. Always apply cleaner when the appliance is cold and rub in the direction of the grain.
- c. Dry all components thoroughly with a dry cloth and polish with a soft dry cloth.

### Periodic Maintenance

**NOTE:** All maintenance operations should only be carried out by a qualified service person.

To achieve the best results, cleaning must be regular and thorough and all controls and mechanical parts should be checked and adjusted periodically by a qualified service person. If any small faults occur, have them attended to promptly. Don't wait until they cause a complete breakdown. It is recommended that the appliance is serviced every 6 months.

If appliance is not used for long periods, close gas shut-off valve upstream of appliance and clean appliance thoroughly.

Appliance should be inspected and gas exhaust flue cleaned by an authorized service person at least every 6 months.

## Fault Finding


This section provides an easy reference guide to the more common problems that may occur during operation of your equipment. The fault finding guide in this section is intended to help you correct, or at least accurately diagnose problems with your equipment.

Although this section covers the most common problems reported, you may encounter a problem not covered in this section. In such instances, please contact your local authorised service agent who will make every effort to help you identify and resolve the problem. Please note that the service agent will require the following information:-

- **Model Trade Name and Serial Number of Appliance. (both can be found on Technical Data Plate located on appliance.**

| Fault                                                                                     | Possible Cause                                                                                                                                                                                    | Remedy                                                                                                                                        |
|-------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Pilot Burners will not ignite or ignites with difficulty and will not stay alight.</b> | Check gas supply is turned <b>On</b> .                                                                                                                                                            | Turn <b>On</b> gas supply.                                                                                                                    |
|                                                                                           | Check gas supply is low or empty.                                                                                                                                                                 | Replenish gas supply.                                                                                                                         |
|                                                                                           | Thermocouple connection loose.                                                                                                                                                                    | Tighten thermocouple connection.<br>Replace any damaged connectors.                                                                           |
|                                                                                           | Over temperature lead connection to interrupter on thermocouple is loose.                                                                                                                         | Tighten over temperature lead to interrupter on thermocouple.                                                                                 |
|                                                                                           | Loose connections will cause resistance to millivolt circuit and result in pilot outage.                                                                                                          |                                                                                                                                               |
|                                                                                           | If sufficient pilot flame cannot be obtained, remove pilot orifice from pilot burner and check for blockage of pilot burner and /or gas line also check that correct size gas pipe has been used. | If connections OK, check for gas at pilot burner by manually lighting pilot burner.<br><br>Call service provider.                             |
|                                                                                           | If pilot can be lit but flame too small to impinge on thermocouple.                                                                                                                               | Check adjustment of pilot flow by adjusting screw below control knob on gas control. Check supply.                                            |
|                                                                                           | If pilot flame OK but goes out after control knob released (after holding in for approx. 30 secs).                                                                                                | Check for faulty thermocouple.<br><br>Call service provider.                                                                                  |
| <b>Pilot Burner delay in ignition of main burners.</b>                                    | If all of above in pilot and thermocouple system checks out satis. but problem still persists.                                                                                                    | Gas control valve is defective and needs replacement.                                                                                         |
|                                                                                           |                                                                                                                                                                                                   |                                                                                                                                               |
| <b>Pilot Burner delay in ignition of main burners.</b>                                    | Check operating pressure as stated in 'Installation' section.                                                                                                                                     | Increase by adjusting pilot adjustment screw on gas control.                                                                                  |
|                                                                                           | Check pilot flame adjustment.                                                                                                                                                                     | Pilot flame for main burner ignition should be approximately 1 inch long. Check pilot burner size is correct. (See 'Specifications' section). |
| <b>Main Burners will not ignite or ignites with difficulty.</b>                           | Insufficient gas pressure.                                                                                                                                                                        | Check gas pressure and adjust as necessary.                                                                                                   |
|                                                                                           | Main injector is blocked.                                                                                                                                                                         | Remove main injector and clean or replace.                                                                                                    |
|                                                                                           | Gas valve is faulty.                                                                                                                                                                              | Replace.<br>Call service provider.                                                                                                            |

G47 Pasta Cooker

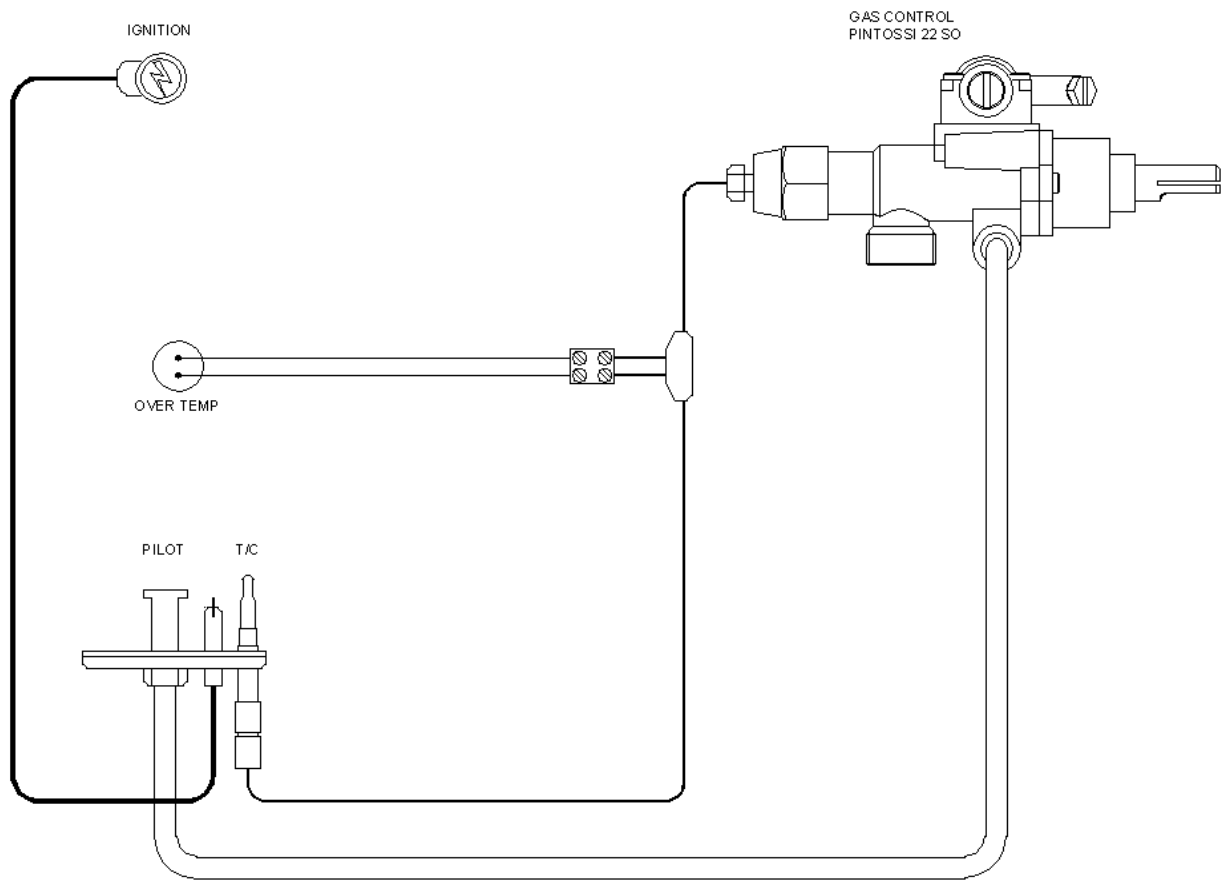

## Conversion Procedure



**Caution**


**Ensure Appliance is isolated from gas supply before commencing servicing.**

### NOTE:

- These conversions should only be carried out by qualified persons. All connections must be checked for leaks before re-commissioning the appliance.
- Adjustment of components that have adjustments / settings sealed (e.g. paint sealed) can only be adjusted in accordance with the following instructions and shall be re-sealed before re-commissioning this appliance.
- For relevant gas specifications refer to 'Gas Specifications Tables' at rear of this section.

### Main Burner

1. Remove the following:-
  - Gas control knob.
  - Water control knob.
  - Control panel.
2. Connect a manometer to upper test point (Line Pressure) on gas control valve. Turn **On** gas and ensure supply pressure is as shown in **Gas Specifications Table** at rear of this section.
3. Remove main burner injectors and replace with correct size injectors as shown in **Gas Specifications Table**.

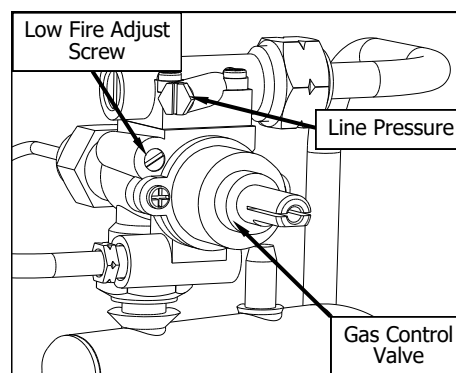


### Pilot Burners

1. Remove the following:-
  - Gas supply tube to pilot burner.

**NOTE: Appliances fitted with piezo igniter electrodes, remove electrode from mounting bracket before unscrewing pilot supply tube.**

2. Remove pilot burner injector and replace with correct size injector as shown in 'Gas Specifications Table' at rear of this section.
3. Refit the following:-
  - Gas supply tube to pilot burner.
  - Piezo igniter electrode.

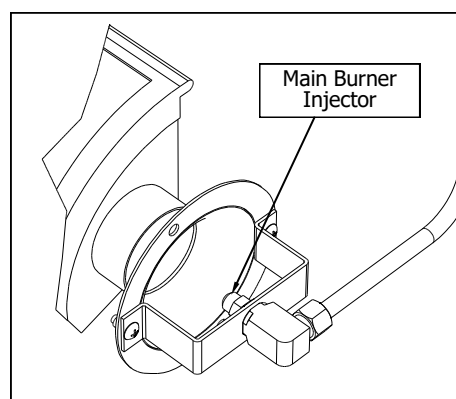


### Low Fire Adjustment

1. Light main burners and check flame size on 'Low' position.
  - Adjust low fire adjustment screw on burner gas control valve to obtain desired flame size.

**NOTE: 'Low Fire Screw' should be sealed with coloured paint on completion of low fire adjustment.**

2. Refit the following:-
  - Gas control knob.
  - Water control knob.
  - Control panel.

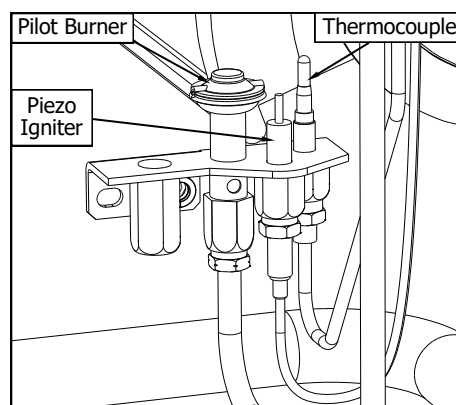


# Gas Conversion and Specifications

## Gas Regulator

- NAT Gas / LPG / Butane Only.

**NOTE:** Gas regulator supplied is convertible between Natural Gas and LP Gas, but it's outlet pressure is fixed ex-factory and is NOT to be adjusted.

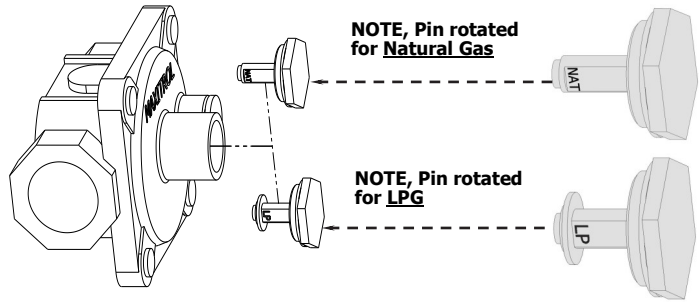

## Gas Type Labels

On completion of gas conversion, replace gas type labels located at:-

- Rear of unit, above gas connection.
- Beside rating plate.

## Commissioning

Before leaving installation;

1. Check all gas connections for leakage using soapy water or other gas detecting equipment.



### Warning

**DO NOT USE A NAKED FLAME TO CHECK FOR GAS LEAKAGES.**

2. Carry out a 'Commissioning' check of appliance as shown in Installation Section of this manual.
3. Ensure any adjustments done to components that have adjustments / settings paint sealed are to be re-sealed.

**NOTE:** If it is not possible to get appliance to operate correctly, shut **Off** gas supply and contact supplier of this appliance.

# Gas Conversion and Specifications

## Gas Specifications

### - Australia

|                               | Natural Gas.                                                                      | LP Gas (Propane)                                                                   |
|-------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Main Burner Injectors         | Ø 3.10mm                                                                          | Ø 1.90mm                                                                           |
| Pilot Burner Injectors        | 0.62                                                                              | 0.35                                                                               |
| Low Fire Screw                | Ø 1.55mm                                                                          | Ø 1.55mm                                                                           |
| High Fire Screw               | Fully Out (c.c.w.)                                                                | Fully Out (c.c.w.)                                                                 |
| Supply Pressure               | 1.13 - 3.40 kPa                                                                   | 2.75 - 4.50 kPa                                                                    |
| Burner Operating Pressure (*) | 0.92 kPa                                                                          | 2.6 kPa                                                                            |
| Gas Regulator Cap Screw       |  |  |

### - New Zealand:

|                               | Natural Gas.                                                                        | LP Gas                                                                               |
|-------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Main Burner Injectors         | Ø 3.10mm                                                                            | Ø 1.80mm                                                                             |
| Pilot Burner Injectors        | 0.62                                                                                | 0.35                                                                                 |
| Low Fire Screw                | Ø 1.55mm                                                                            | Ø 1.55mm                                                                             |
| High Fire Screw               | Fully Out (c.c.w.)                                                                  | Fully Out (c.c.w.)                                                                   |
| Supply Pressure               | 1.13 - 3.40 kPa                                                                     | 2.75 - 4.50 kPa                                                                      |
| Burner Operating Pressure (*) | 0.92 kPa                                                                            | 2.6 kPa                                                                              |
| Gas Regulator Cap Screw       |  |  |

### - UK Only:

Category: **II<sub>2H3P</sub>**  
 Flue Type: **A<sub>1</sub>**

|                           | Natural Gas (G20)                                                                   | Propane (G31)                                                                        |
|---------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Main Burner Injectors     | Ø 3.10mm                                                                            | Ø 1.90mm                                                                             |
| Pilot Burner Injectors    | 0.62                                                                                | 0.35                                                                                 |
| Low Fire Screw            | Ø 1.55mm                                                                            | Ø 1.55mm                                                                             |
| High Fire Screw           | Fully Out (c.c.w.)                                                                  | Fully Out (c.c.w.)                                                                   |
| Supply Pressure           | 20 mbar                                                                             | 37 mbar                                                                              |
| Burner Operating Pressure | 9.5 mbar                                                                            | 27.7 mbar                                                                            |
| Gas Regulator Cap Screw   |  |  |

**NOTE:** (\*) Measure burner operating pressure at upper test point (Supply Pressure) on gas control valve located behind control panel, this is to be carried out with burner operating at 'High Flame' setting. Operating pressure is ex-factory set, through appliance regulator and not to be adjusted, apart from when carrying out gas conversion, if required. Refer to 'Gas Conversion and Specification' Section for further details.

## Gas Conversion and Specifications

### - All Other Markets:

|                                      | Natural Gas                                                                       | LP Gas                                                                              | Butane                      |
|--------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------|
| <b>Main Burner Injectors</b>         | Ø 3.10mm                                                                          | Ø 1.80mm                                                                            | Ø 1.70mm                    |
| <b>Pilot Burner Injectors</b>        | 0.62                                                                              | 0.35                                                                                | 0.35                        |
| <b>Low Fire Screw</b>                | Ø 1.55mm<br>2 turns out (c.c.w.)                                                  | Ø 1.55mm<br>Fully In (c.w.)                                                         | Ø 1.55mm<br>Fully In (c.w.) |
| <b>High Fire Screw</b>               | Fully Out (c.c.w.)                                                                | Fully Out (c.c.w.)                                                                  | Fully Out (c.c.w.)          |
| <b>Supply Pressure</b>               | 1.13 - 3.40 kPa                                                                   | 2.75 - 4.50 kPa                                                                     | 2.75 - 4.50 kPa             |
| <b>Burner Operating Pressure (*)</b> | 0.92 kPa                                                                          | 2.6 kPa                                                                             | 2.6 kPa                     |
| <b>Gas Regulator Cap Screw</b>       |  |  |                             |

**(\*) NOTE:**

- **(\*) Measure burner operating pressure at Burner Operating Pressure test point on gas control valve, with burner operating at 'High Flame' setting.**
- **NAT, LPG & Butane Only - Operating pressure is ex-factory set and is not to be adjusted, apart from when converting between gasses, if required.**
- **Standard models can only be converted between Nat. Gas, LP Gas and Butane, but not Town Gas.**
- **Refer to 'Gas Conversion and Specifications' section in this manual for further details.**

## Replacement Parts List

### Replacement Parts List

#### ! IMPORTANT

**Only genuine authorized replacement parts should be used for servicing and repair of this appliance. Instructions supplied with parts should be followed when replacing components.**

**For further information and servicing instructions, contact your nearest authorized service branch (contact details are as shown on reverse of front cover of this manual).**

When ordering spare parts, please quote part number and description as listed below. If part required is not listed below, request part by description and quote model number and serial number which is shown on rating plate.

#### Controls

|         |                                                                       |                           |
|---------|-----------------------------------------------------------------------|---------------------------|
| 018094  | Thermocouple.                                                         |                           |
| 229702  | Overtemp 115°.                                                        |                           |
| 032190  | Main Burner Injector                                                  | (LPG/Propane) - ø 1.90mm. |
| 032180  | Main Burner Injector                                                  | (LPG) - ø 1.80mm.         |
| 032310  | Main Burner Injector                                                  | (Nat Gas) - ø 3.10mm.     |
| 032170  | Main Burner Injector                                                  | (Butane) - ø 1.70mm.      |
| 018090K | Pilot Burner (includes electrode)                                     | (Not UK).                 |
| 025630K | Pilot Burner (includes electrode)                                     | (UK Only).                |
| 018092  | Pilot                                                                 | (LPG / Butane) 0.35.      |
| 018091  | Pilot                                                                 | (Nat Gas) - 0.62.         |
| 249444  | Control Panel                                                         |                           |
| 249459  | Control Panel Black                                                   |                           |
| 229699  | Gas Control Valve.                                                    |                           |
| 229695  | Gas Control Knob.                                                     |                           |
| 246027  | Water Valve Assembly (Includes Below).                                |                           |
| 246004  | Water Valve Elbow 1/2" CC MM.                                         |                           |
| 242566  | 1/4 Turn Ceramic Cartridge Cold.                                      |                           |
| 243319  | Cartridge Gear & Screw.                                               |                           |
| 018095  | Piezo H.T. Lead.                                                      |                           |
| 227508  | Piezo Ignitor.                                                        |                           |
| 022575  | Burner Kit.                                                           |                           |
| 228531  | Regulator (RV48CLM) - (Natural Gas/LPG - convertible) - 3/4" BSP F/F. |                           |

#### General

|        |                                                                  |              |
|--------|------------------------------------------------------------------|--------------|
| 238674 | Pasta Basket LH 1/6                                              | 165 x 125mm. |
| 238819 | Pasta Basket RH 1/6                                              | 165 x 125mm. |
| 229707 | Pasta Cooker Basket Drain Tray.                                  |              |
| 229682 | Basket Support Frame.                                            |              |
| 227856 | Door Magnet.                                                     |              |
| 227449 | Door Handle.                                                     |              |
| 019390 | Water Drain Valve.                                               |              |
| 229823 | Overflow Hose.                                                   |              |
| 227850 | Adjustable Leg - 150mm.                                          |              |
| 228531 | Gas Regulator 3/4" BSP F/F Convertible (. Nat. Gas LPG, Butane). |              |

#### Accessories (Optional)

|        |                         |              |
|--------|-------------------------|--------------|
| 228793 | Plinth Kit.             |              |
| 229836 | Pasta Cooker Basket 1/4 | 165 x 165mm. |

| Model      | Gas Type to Convert to |        |        |               |          |                   |
|------------|------------------------|--------|--------|---------------|----------|-------------------|
|            | Nat. Gas               | LPG    | Butane | Nat. Gas (UK) | LPG (UK) | LPG (NZ & EXPORT) |
| <b>G47</b> | 232061                 | 232060 | 232062 | 232061        | 232060   | 244511            |

|        |                                                                      |              |
|--------|----------------------------------------------------------------------|--------------|
| 229837 | Pasta Cooker Basket 1/2                                              | 320 x 165mm. |
| 240516 | Noodle Kit (Gas) - includes 5 x noodle baskets + noodle basket tray. |              |

