



Installation and Operation Manual

# Electric Griddle Ranges

GP8910E  
GP8910EC

GPL8910E  
GPL8910EC

GPB8910E  
GPB8910EC

GPLB8910E  
GPLB8910EC



\_\_\_\_\_

Date Purchased

\_\_\_\_\_

\_\_\_\_\_

Serial Number

\_\_\_\_\_

\_\_\_\_\_

Dealer

\_\_\_\_\_

\_\_\_\_\_

Service Provider

\_\_\_\_\_



For use in GB & IE

---

## MANUFACTURED BY

**Moffat Limited**  
Rolleston 7675  
New Zealand

## INTERNATIONAL CONTACTS

### AUSTRALIA

**Moffat Pty Limited**

<b>Web:</b>	www.moffat.com.au
<b>E.Mail:</b>	vsales@moffat.com.au
<b>Main Office:</b>	(tel) +61 (03) 9518 3888 (fax) +61 (03) 9518 3838
<b>Service:</b>	(tel): 1800 622 216
<b>Spares:</b>	(tel): 1800 337 963
<b>Customer Service:</b>	(tel): 1800 335 315 (fax): 1800 350 281

### CANADA

**Serve Canada**

<b>Web:</b>	www.servecanada.com
<b>E.Mail:</b>	info@servecanada.com
<b>Sales:</b>	(tel): 800 551 8795 (Toll Free)
<b>Service:</b>	(tel): 800 263 1455 (Toll Free)

### NEW ZEALAND

**Moffat Limited**

<b>Web:</b>	www.moffat.co.nz
<b>E.Mail:</b>	sales@moffat.co.nz
<b>Main Office:</b>	(tel): 0800 663328

### UNITED KINGDOM

**Blue Seal**

<b>Web:</b>	www.blue-seal.co.uk
<b>E.Mail:</b>	sales@blue-seal.co.uk
<b>Sales:</b>	(tel): +44 121 327 5575 (fax): +44 121 327 9711
<b>Spares:</b>	(tel): +44 121 322 6640 (fax): +44 121 327 9201
<b>Service:</b>	(tel): +44 121 322 6644 (fax): +44 121 327 6257

### UNITED STATES

**Moffat**

<b>Web:</b>	www.moffat.com
<b>Sales:</b>	(tel): 1-800 551 8795 (Toll Free) (tel): 336 661 1556 (fax): 336 661 9546
<b>Service:</b>	(tel): 866 673 7937 (Toll Free)

### REST OF WORLD

**Moffat Limited**

<b>Web:</b>	www.moffat.co.nz
<b>E.Mail:</b>	export@moffat.co.nz

The reproduction or copying of any part of this manual by any means whatsoever is strictly forbidden unless authorized previously in writing by the manufacturer.

In line with policy to continually develop and improve its products, Moffat Ltd. reserves the right to change the specifications and design without prior notice.

© Copyright Moffat Ltd. June 2016.

---

Waldorf Electric Griddle

GP(L)(B)8910E	Electric Griddle Range, Static Oven	900mm.
GP(L)(B)8910EC	Electric Griddle Range, Convection Oven	900mm.

<b>Introduction .....</b>	<b>2</b>
<b>Specifications .....</b>	<b>3</b>
Model Numbers Covered in this Specification	
General	
Electrical Supply Requirements	
Electrical Connection	
Dimensions	
<b>Installation .....</b>	<b>5</b>
Installation Requirements	
Unpacking	
Location	
Clearances	
Assembly	
Electrical Connection	
Commissioning	
<b>Operation.....</b>	<b>8</b>
Operation Guide	
Description of Controls	
Griddle	
Oven	
<b>Cleaning and Maintenance .....</b>	<b>10</b>
General	
After Each Use	
Daily Cleaning	
Weekly Cleaning	
Periodic Maintenance	
<b>Fault Finding.....</b>	<b>13</b>
<b>Circuit Schematics.....</b>	<b>14</b>
<b>Replacement Parts List .....</b>	<b>17</b>

## Introduction

---

We are confident that you will be delighted with your WALDORF Electric Griddle Range, Static / Convection Ovens and they will become a most valued appliance in your commercial kitchen.

To ensure you receive the utmost benefit from your new WALDORF appliance, there are two important things you can do.

### **Firstly:**

Please read the instruction book carefully and follow the directions given. The time taken will be well spent.

### **Secondly:**

If you are unsure of any aspect of the installation, instructions or performance of your appliance, contact your WALDORF dealer promptly. In many cases a phone call could answer your question.

### **CE Only:**

These instructions are only valid if the country code appears on the appliance. If the code does not appear on the appliance, refer to the supplier of this appliance to obtain the technical instructions for adapting the appliance to the conditions for use in that country.

### **WARNING:**

**IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS APPLIANCE.**

### **WARNING:**

**GREAT CARE MUST BE TAKEN BY THE OPERATOR TO USE THE EQUIPMENT SAFELY TO GUARD IT AGAINST RISK OF FIRE.**

- **THE APPLIANCE MUST NOT BE LEFT ON UNATTENDED.**
- **IT IS RECOMMENDED THAT A REGULAR INSPECTION IS MADE BY A COMPETENT SERVICEMAN TO ENSURE CORRECT AND SAFE OPERATION OF YOUR APPLIANCE IS MAINTAINED.**
- **DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPOURS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.**
- **DO NOT SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.**

### **CAUTION:**

**This appliance is;**

- **For professional use and is to be used by suitably qualified / trained persons only.**
- **Only authorised service persons are to carry out installation, servicing and gas conversion operations.**
- **Components having adjustments protected (e.g. paint sealed) by the manufacturer should not be adjusted by the user / operator.**
- **DO NOT operate the appliance without the legs supplied fitted.**

## Model Numbers Covered in this Specification

<b>GP[1]8910E</b>	<b>Electric Griddle Range, Static Oven</b>	<b>900 mm wide.</b>
<b>GP[1]8910EC</b>	<b>Electric Griddle Range, Convection Oven</b>	<b>900 mm wide.</b>

### NOTE:

#### [1]: - Model Options;

- - Standard.
- L - Low Back.
- B - Bold Front.
- LB - Low Back and Bold Front.

## General

A commercial heavy duty, 900mm wide, Electric Griddle Range, designed for modular kitchens and constructed in an easy clean stainless steel external finish. The griddle elements are constructed using stainless steel sheathed heating elements with dual thermostatic control zones.

The Griddle uses a 20mm thick griddle plate with the option of either ribbed or chromed mirror plate options.

The range can be equipped with either an electric 6.5kW convection or static oven, 900mm wide.

## Electrical Supply Requirements

MODEL	3-Phase Connection 3P+N+E 400-415V, 50/60Hz		Fan Motor
<b>GP8910E</b>	18.5 kW	L1 - 24.6 Amps L2 - 25.6 Amps L3 - 25.6 Amps	-----
<b>GP8910EC</b>	18.9 kW	L1 - 25.9 Amps L2 - 25.6 Amps L3 - 25.6 Amps	100W

## Electrical Connection

### **WARNING:**

**THIS APPLIANCE MUST BE EARTHED. IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY A SUITABLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.**

Electrical supply connection point is located at the rear of the appliance, approximately 80 mm from the right hand side and 467 mm from the rear and 150 mm from the floor.




When connecting a Waldorf electric appliance to the main supply, ensure that the following is carried out:-

- An isolating switch is fitted within 2 m of the appliance, but not on the appliance and in such a position that the user does not have to reach across the cooking surface.
- Supply cord shall be oil-resistant, sheathed flexible cable and not lighter than ordinary polychloroprene or other equivalent synthetic elastomer sheathed cord (as per AS / NZS 3191 part 2.10.11. or IEC 60245-IEC-57) e.g. H05 RN-F Type.
- The branch supply line shall be individually overload protected to the correct current rating and the supply chord shall be protected against any mechanical or thermal damage.
- A grommet is fitted around the wiring entry hole into the appliance.
- All wiring connections must be tight.

Refer to the appropriate wiring standards for the size of cable that is to be supplied to an appliance for the current drawn on that line.

## Dimensions

GP(L)8910E / EC

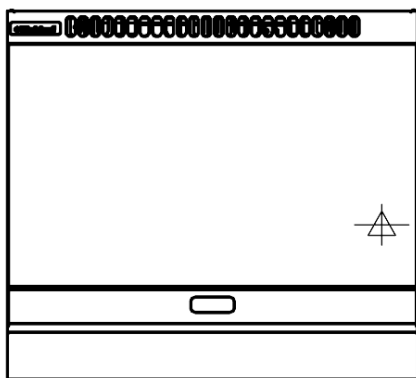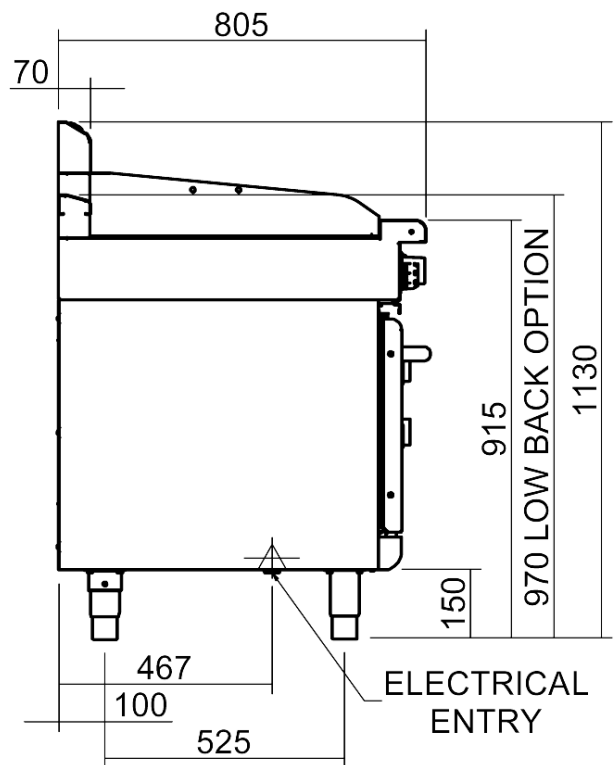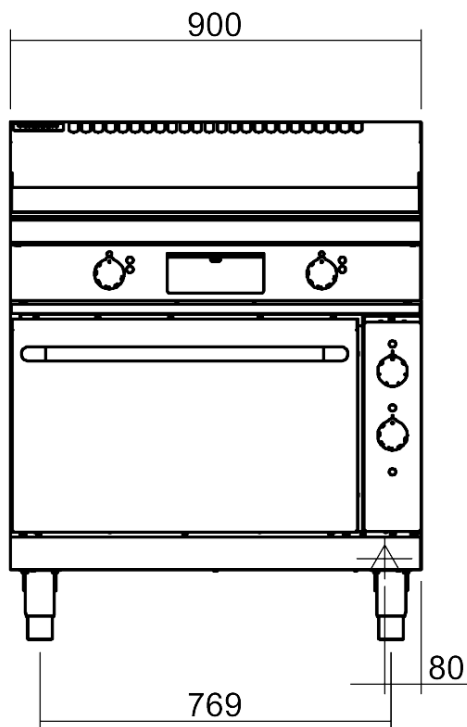

## Installation Requirements

### NOTE:

- It is most important that this appliance is installed correctly and that operation is correct before use. Installation shall comply with local electrical and health and safety requirements.
- This appliance shall be installed with sufficient ventilation to prevent the occurrence of unacceptable concentrations of health harmful substances in the room, the appliance is installed in.

Waldorf Electric Griddle Ranges Electric Static / Convection Oven are designed to provide years of satisfactory service and correct installation is essential to achieve the best performance, efficiency and trouble-free operation.

This appliance must be installed in accordance with National installation codes and in addition, in accordance with relevant National / Local codes covering electrical, fire and health and safety.

**Australia / New Zealand  
United Kingdom:**

AS / NZS3000  
BS 7671

- Wiring Rules.  
- Requirements for Electrical Installations.

**Installations must be carried out by authorised persons only. Failure to install equipment to the relevant codes and manufacturer's specifications shown in this section will void the warranty.**

**Components having adjustments protected (e.g. paint sealed) by the manufacturer are only to be adjusted by an authorised service agent. They are not to be adjusted by the installation person.**

## Unpacking

- Remove all packaging and transit protection from the appliance including all protective plastic coating from the exterior stainless steel panels.
- Check equipment and parts for damage. Report any damage immediately to the carrier and distributor.
- Ensure that the adjustable feet / castors are securely fitted.
- Report any deficiencies to the distributor who supplied the appliance.
- Check that the available electrical supply is correct to that shown on the rating plate (Refer to the dimension drawings for rating plate location).

## Location

1. Installation must include adequate clearance and ventilation, to prevent dangerous build up of combustion products.
2. Never directly connect a ventilation system to the appliance flue outlet.
3. Position the appliance in its approximate working position.
4. The legs / castors must always be fitted to the base of the appliance.
5. Components having adjustments protected (e.g. paint sealed) by the manufacturer are only to be adjusted by an authorised service agent. They are not to be adjusted by the installation person.

**NOTE: Do not obstruct or block the appliances flue. Never directly connect a ventilation system to the appliance flue outlet.**

## Clearances

**NOTE: Only non-combustible materials can be used in close proximity to this appliance.**

	Combustible Surface	Non Combustible Surface
Left / Right Hand Side	250mm	0mm
Rear	50mm	0mm

# Installation

## Assembly

### **CAUTION:**

- **This appliance is for professional use and is to be used by suitably qualified / trained persons only.**
- **Only qualified service persons are to carry out installation and servicing of this appliance.**

### **All Models**

All models come pre-assembled.

**NOTE:** This appliance is fitted with adjustable feet / castors to enable the unit to be positioned securely and level. This should be carried out on completion of the electrical connection. Refer to the 'Electrical Connection' section.

### **Optional Accessories (Refer to Replacement Parts List)**

- Plinth Kit. For installation details, refer to the instructions supplied with each kit.

## Electrical Connection

### **WARNING:**

**THIS APPLIANCE MUST BE EARTHED. IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY A SUITABLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.**

**NOTE:** ALL ELECTRICAL CONNECTIONS MUST ONLY BE CARRIED OUT BY AN AUTHORISED PERSON.

Each appliance should be connected to an adequately protected power supply and isolation switch mounted adjacent to, but not behind the appliance. This switch must be clearly marked and readily accessible in case of fire.

1. Check that the electricity supply is correct as shown on the Rating Plate. (Refer to the dimension drawings for rating plate location).
2. The supply terminal connections are located at the rear of the the appliance. Refer to 'Electrical Connections' in the 'Specifications' section of the manual.
3. Remove the control panel to allow connection access for the electrical supply.
4. Bring the supply cable up through the grommet at the back of the appliance and through the compression type gland provided on the rear of the main electrical switchgear panel.
5. Connect the mains supply to L1, L2 and L3 fuse carrier connections for 3 phase.
6. Connect neutral and earth conductors to neutral stud and earth stud respectively.
7. For all connections ensure that conductors are secure and appropriately terminated.
8. Tighten the cable gland to secure against tension on the cable.



### **NOTE:**

- **This appliance must be grounded / earthed.**
  - **Fixed wiring installations must incorporate an all-pole disconnection switch.**
9. Correctly locate the appliance into its final operating position and using a spirit level, adjust the legs so that the appliance is level and at the correct height.
  10. Connect the power supply to the appliance.
  11. Check that the electrical supply is as shown in the 'Specifications' section.



### Commissioning

1. Before leaving the new installation;
  - a. Check the following functions in accordance with the operating instructions specified in the 'Operation' section of this manual.
    - Check the current draw and loading for the equipment. Refer to the 'Specification' section for the correct electrical requirements.
    - Check that all the connections are correct and that all cover panels have been re-fitted.
    - Check that the appliance functions in accordance with the operating instructions.
    - Ensure that this instruction manual is left with the appliance.
    - Ensure that all the relevant details and contacts have been added to the front of this manual.
  - b. Ensure that the operator has been instructed in the areas of correct operation and shutdown procedure for the appliance.
2. This manual must be kept by the owner for future reference and as a record of ***Date of Purchase, Date of Installation*** and ***Serial Number of Unit*** recorded and kept with this manual. **(These details can be found on the Rating Plate. (Refer to the dimension drawings for rating plate location)).**

#### NOTE:

- If for some reason it is not possible to get the appliance to operate correctly, turn off the electrical power supply and contact a qualified service person. The supplier of this appliance will be able to recommend a suitable person.
- Make sure that the electrical supply is turned off before any service or maintenance work is carried out.

# Operation

## Operation Guide



### **CAUTION:**

- **This appliance is for professional use and is only to be used by suitably qualified / trained persons.**
- **Only qualified service persons are to carry out installation and servicing of this appliance.**

1. Waldorf Electric Griddle Range, Electric Static / Convection Oven have been designed to provide simplicity of operation and 100% safety protection.
2. Improper operation is therefore almost impossible, however bad operating practices can reduce the life of the griddle and produce a poor quality product. To use this appliance correctly please read the following sections carefully:-

- **Griddle.**
- **Oven.**

## Description of Controls

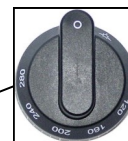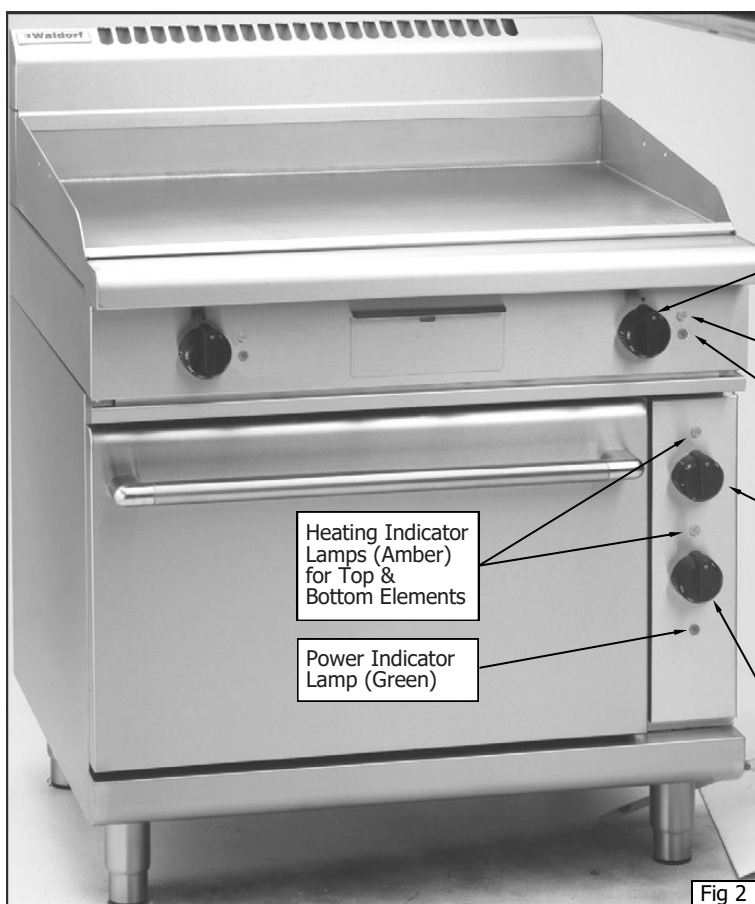


### **Griddle Control Knob**

With temperature Gradient of 50°C to 320°C

Power Indicator Lamps (Green)

Heating Indicator Lamps (Amber)

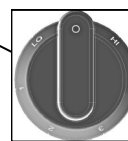

### **Oven Top Heat Control**

**O** OFF Position  
**LOW** Position  
**1** Position  
**2** Position  
**3** Position  
**4** Position  
**HIGH** Position



### **Oven Thermostat Control Knob**

**O** OFF Position  
50°C to 300°C Temperature Graduations

### Griddle

1. Turn 'ON' the power at the mains supply, the green neon will illuminate.
2. Turn the thermostat control knob to the desired temperature. When the amber neon goes out, the desired temperature has been reached and the griddle is ready for use.

**NOTE:** Turning the control to a higher setting than required will not shorten the heat up time.

3. To turn 'OFF' the griddle, turn the thermostat control knob to the lowest setting and turn 'OFF' the mains power to the griddle.
4. Both the amber and green neons should not be illuminated.

### Oven

**! IMPORTANT** DO NOT USE aluminium foil or trays directly on the cast iron sole plate(s). NEVER block or cover the openings on each side of the sole plate(s).

The oven is fitted with top and bottom elements. The thermostat maintains the overall oven temperature. The top element is further controlled by the oven top heat control. Convection ovens (GP8910E / EC) are fitted with a circulation fan.

**NOTE:** The Thermostat on the oven provides overall control of the temperature within the oven by controlling both elements, where as the Oven Top Heat Control provides a means of balancing the distribution of heat between the top and bottom of the oven.

Place oven racks in desired position.

#### Preheat:

Preheat the oven by selecting the desired temperature, and turning the oven top heat control (Refer to Fig 5 on the previous page) to a maximum of 2. When the desired temperature is reached, the amber neon will go out.

#### Cooking:

**! IMPORTANT** DO NOT USE aluminium foil or trays directly on the cast iron sole plate(s). NEVER block or cover the openings on each side of the sole plate(s).

When the desired temperature has been reached, load the oven with product and set the oven top heat control to the desired setting.

**NOTE:** When the oven top heat control is set to a high setting, proportionally more heat is produced at the top of the oven. (This can be used for browning, etc, during the cooking operation). With the oven top heat control set on a low setting, less heat is produced from the top oven elements. (This mode is used for general baking purposes to prevent cakes, etc, from getting too brown and crisp on the top, but allow the cake to cook through).

To obtain more top heat during cooking, turn the oven top heat control to a higher position. (The higher the setting, the more top heat).

#### Turning 'OFF' the Oven:

- a. Turn the oven top heat control to the 'O' off position. The top heating will be turned 'OFF' and the upper heating indicator lamp (Amber) will extinguish.
- b. Turn the thermostat control knob to the 'O' off position and the lower heating indicator lamp (Amber) will extinguish. The oven is now turned 'OFF'.

## Cleaning and Maintenance

---

### General

#### **CAUTION:**

**Always turn off the electrical supply at the mains before cleaning.  
This appliance is not water proof.  
Do Not use water jet spray to clean interior or exterior of this appliance.**

Clean the griddle regularly. A clean appliance looks better, will last longer and will perform better. Carbonised grease on the surface or on the griddle plate will hinder the transfer of heat from the cooking surface to the food. This will result in loss of cooking efficiency.

**NOTE:** Each Heavy Duty Griddle is supplied with a scraper tool and a pack of blades for cleaning the griddle surface.

- 1 Flat Blade (pack) - 1 Ribbed Blade (pack) and 2 handles for Ribbed Heavy Duty Griddle.
- 1 Flat Blade (pack) and 1 handle for Smooth Heavy Duty Griddle.

**NEVER use the ribbed scraper blade on the flat chrome surfaced griddle plate.**

Replacement blades and handles can be purchased separately. Refer to the 'Replacement Parts List' at the rear of the manual.

**DO NOT use water on the griddle plate while this item is still hot as warping and cracking may occur. Allow the griddle plate to cool down before cleaning.**

#### **WARNING:**

**THE BLADES FITTED TO THE SCRAPER TOOL ARE EXTREMELY SHARP AND ARE TO BE USED WITH CARE.**

**NOTE:**

- DO NOT use abrasive detergents, strong solvents or caustic detergents as they could corrode or damage the range.
- In order to prevent the forming of rust on the griddle plate (Steel Plate), ensure that any detergent or cleaning material has been completely removed after each cleaning. The appliance should be switched on briefly to ensure the griddle plate becomes dry. Oil or grease should be spread over the griddle surface in order to form a thin protective greasy film.

To keep your griddle clean and operating at peak efficiency, follow the procedures shown below:-

### After Each Use

#### **CAUTION:**

**Always ensure that an even pressure is applied over the whole surface of the scraper tool when using on the flat chromed surface of the griddle, to prevent scoring of the surface.**

**NEVER bang the sharp edge of the scraper tool on the flat chromed surface of the griddle as this will damage the chrome finish and invalidate the warranty.**

1. Clean the griddle with the scraper tool to remove any food debris.
2. Always ensure that the scraper tool blades are changed regularly to ensure that the scraper tool works efficiently and prevents damage to the griddle plate surface.

### Daily Cleaning

1. The grease drawer should be checked and emptied frequently to prevent overflow and spillage. Remove the grease drawer while still warm so that the grease is in a liquid state. Empty any grease from the drawer and wash thoroughly in the same manner as any cooking utensil.
2. Clean the Control Panel with a damp cloth lightly moistened with a solution of mild detergent and water.
3. Thoroughly clean the splash back, the interior and exterior surfaces of the range with hot water, a detergent solution and a soft scrubbing brush.
4. Brush the griddle surface with a soft bristled brush. Any carbon deposits should be removed using the supplied scraper tool followed by wiping with a cloth to prevent accumulation of food deposits.
5. Dry the griddle thoroughly with a dry cloth and polish with a soft dry cloth.

**NOTE:** Chrome Griddle Plate; DO NOT use abrasive detergents, strong solvents or caustic detergents as they could corrode or damage the chrome plate.

### Weekly Cleaning

**NOTE:**

- If the Range usage is very high, we recommend that the weekly cleaning procedure is carried out on a more frequent basis.
- Ensure that protective gloves are worn during the cleaning process.
- DO NOT use harsh abrasive detergents, strong solvents or caustic detergents as they will damage the range and burners.
- DO NOT use water on the griddle plates while they are still hot as warping may occur. Allow these items castings to cool and remove for cleaning.

#### Griddle - Steel Plate

**NOTE:** In order to prevent the forming of rust on the griddle plate, ensure that all detergent and cleaning material has been entirely removed after each cleaning process. The appliance should be switched on briefly to ensure the griddle plate becomes dry. Oil or grease should be spread over the griddle surface in order to form a thin protective greasy film.

- a. Remove and clean the grease collection drawer frequently to prevent over spills.
- b. Clean the griddle surface thoroughly with a scraper tool or a wire brush. If necessary use a griddle stone or a scotch bright pad on the griddle surface for the removal of stubborn or accumulated carbon deposits.
- c. Occasionally bleach the griddle plate with vinegar when the plate is cold.
- d. Clean with hot water, a mild detergent solution and a scrubbing brush. Dry all components thoroughly with a dry cloth.
- e. The griddle should be switched on briefly to ensure that the griddle plate becomes dry. A thin smear of cooking oil should be spread over the griddle in order to form a protective film.

#### Griddle - Chrome Plate

##### **CAUTION:**

**Always ensure that an even pressure is applied over the whole surface of the scraper tool when using on the flat chromed surface of the griddle, to prevent scoring of the surface.**

**NEVER bang the sharp edge of the scraper tool on the flat chromed surface of the griddle as this will damage the chrome finish and invalidate the warranty.**

**NOTE:** In order to maintain the finish on the chrome griddle plate, ensure that all detergent and cleaning material has been entirely removed after each cleaning process. The appliance should be switched on briefly to ensure the griddle plate becomes dry.

## **Cleaning and Maintenance**

---

- a. Remove and clean the grease collection drawer frequently to prevent over spills.
- b. Clean the griddle surface thoroughly with the supplied scraper tool.
- c. Allow the plate to cool, then clean the plate with a scrubbing brush, a mild non-abrasive detergent and water.
- d. Occasionally bleach the plate with vinegar when cold.
- e. Dry the griddle thoroughly with a dry cloth and polish with a soft dry cloth.
- f. The griddle should be switched on briefly to ensure that the griddle plate becomes dry.

### **Griddle Cooking Area**

- a. Clean the griddle cooking area with a soft cloth and a mild detergent and hot water solution.
- b. Baked on deposits or discolouration may require a good quality stainless steel cleaner or stainless steel wool. Always apply cleaner when the appliance is cold and rub in the direction of the grain.
- c. Remove the grease drawer and clean with a mild anti bacterial detergent and hot water solution using a soft bristled brush. Dry the grease drawer thoroughly with a dry cloth.

### **Oven Interior**

- a. Do not use wire brushes, steel wool or other abrasive materials to clean the oven interior.
- b. Clean the oven regularly with a good quality domestic oven cleaner.
- c. Once a week, remove and clean any built up of grease etc. from the oven racks and the bottom spill over cover.

### **Stainless Steel Surfaces**

- a. Clean the exterior surfaces of the griddle with hot water, a mild detergent solution and a soft scrubbing brush. Note that the control knobs are a push fit onto the spindles and can be removed to allow cleaning of the front control panel.
- b. Baked on deposits or discolouration may require a good quality stainless steel cleaner or stainless steel wool. Always apply cleaner when the appliance is cold and rub in the direction of the grain.
- c. To remove any discolouration, use an approved stainless steel cleaner or stainless steel wool. Always rub in the direction of the grain.
- d. Remove the grease tray and clean with a mild anti bacterial detergent and hot water solution using a soft bristled brush.
- e. Dry the grease tray thoroughly with a dry cloth.
- f. Dry all components thoroughly with a dry cloth and polish with a soft dry cloth.

### **Periodic Maintenance**

To achieve the best results, cleaning must be regular and thorough and all controls and mechanical parts should be checked and adjusted periodically by a competent serviceman. If any small faults occur, have them attended to promptly. Don't wait until they cause a complete breakdown. It is recommended that the appliance is serviced every 6 months.

This section provides an easy reference guide to the more common problems that may occur during the operation of your equipment. The fault finding guide in this section is intended to help you correct, or at least accurately diagnose problems with your equipment.

Although this section covers the most common problems reported, you may encounter a problem not covered in this section. In such instances, please contact your local authorised service agent who will make every effort to help you identify and resolve the problem. Please note that the service agent will require the following information:-


- **The Model Trade Name and the Serial Number of the Appliance.** (both can be found on the **Technical Data Plate** located on the appliance. (Refer to the 'Dimensions' section).

<b>Fault</b>	<b>Possible Cause</b>	<b>Remedy</b>
Element does not work when turned 'ON'.	Overtemp located behind the control panel has tripped.	Call the service provider.
	Check for an electrical short by checking that there is NO continuity between any "phase in" line and the metal appliance body itself.	Call the service provider.
	Check for the item failing (element, control etc) by using a multimeter as shown on following pages.	Call the service provider.
Complete power failure of the appliance.	Check fuse connection at the mains supply.	Replace the blown fuse.
	Ensure that the fuse size is correct to carry the load.	Carry out a continuity and resistance check on the appliance.
	Check for an electrical short to the appliance.	Call the service provider.

**NOTE:** Components having adjustments protected (e.g. paint sealed) by the manufacturer, are only to be adjusted by an authorised service agent. They are not to be adjusted by an unauthorised service person.


# Circuit Schematics

## GP8910E / GP8910EC Griddle Wiring Schematic

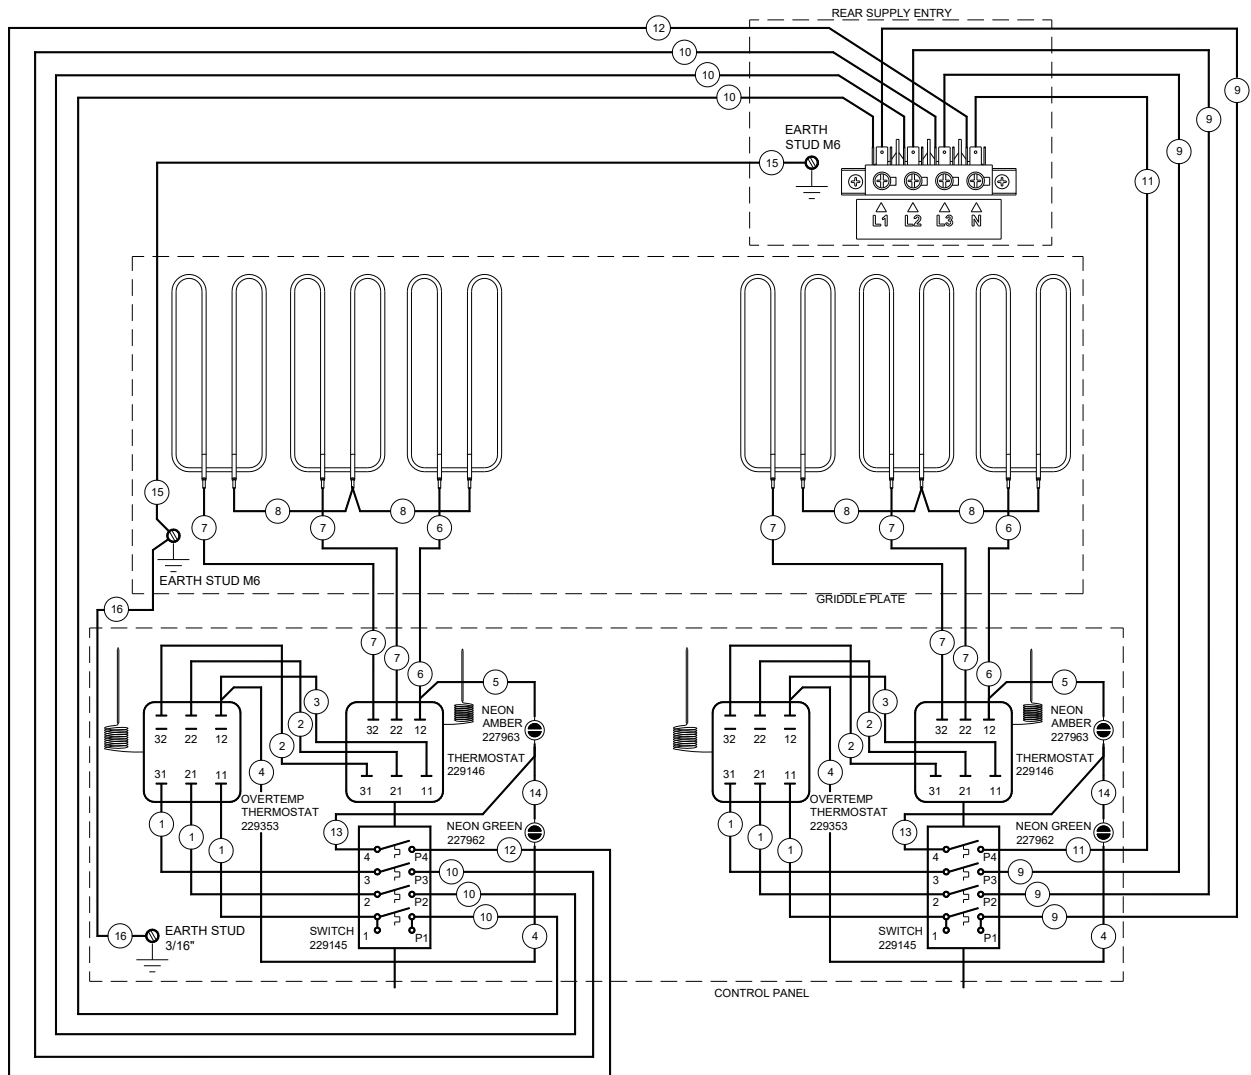




GP8910E (Static Oven) Wiring Schematic

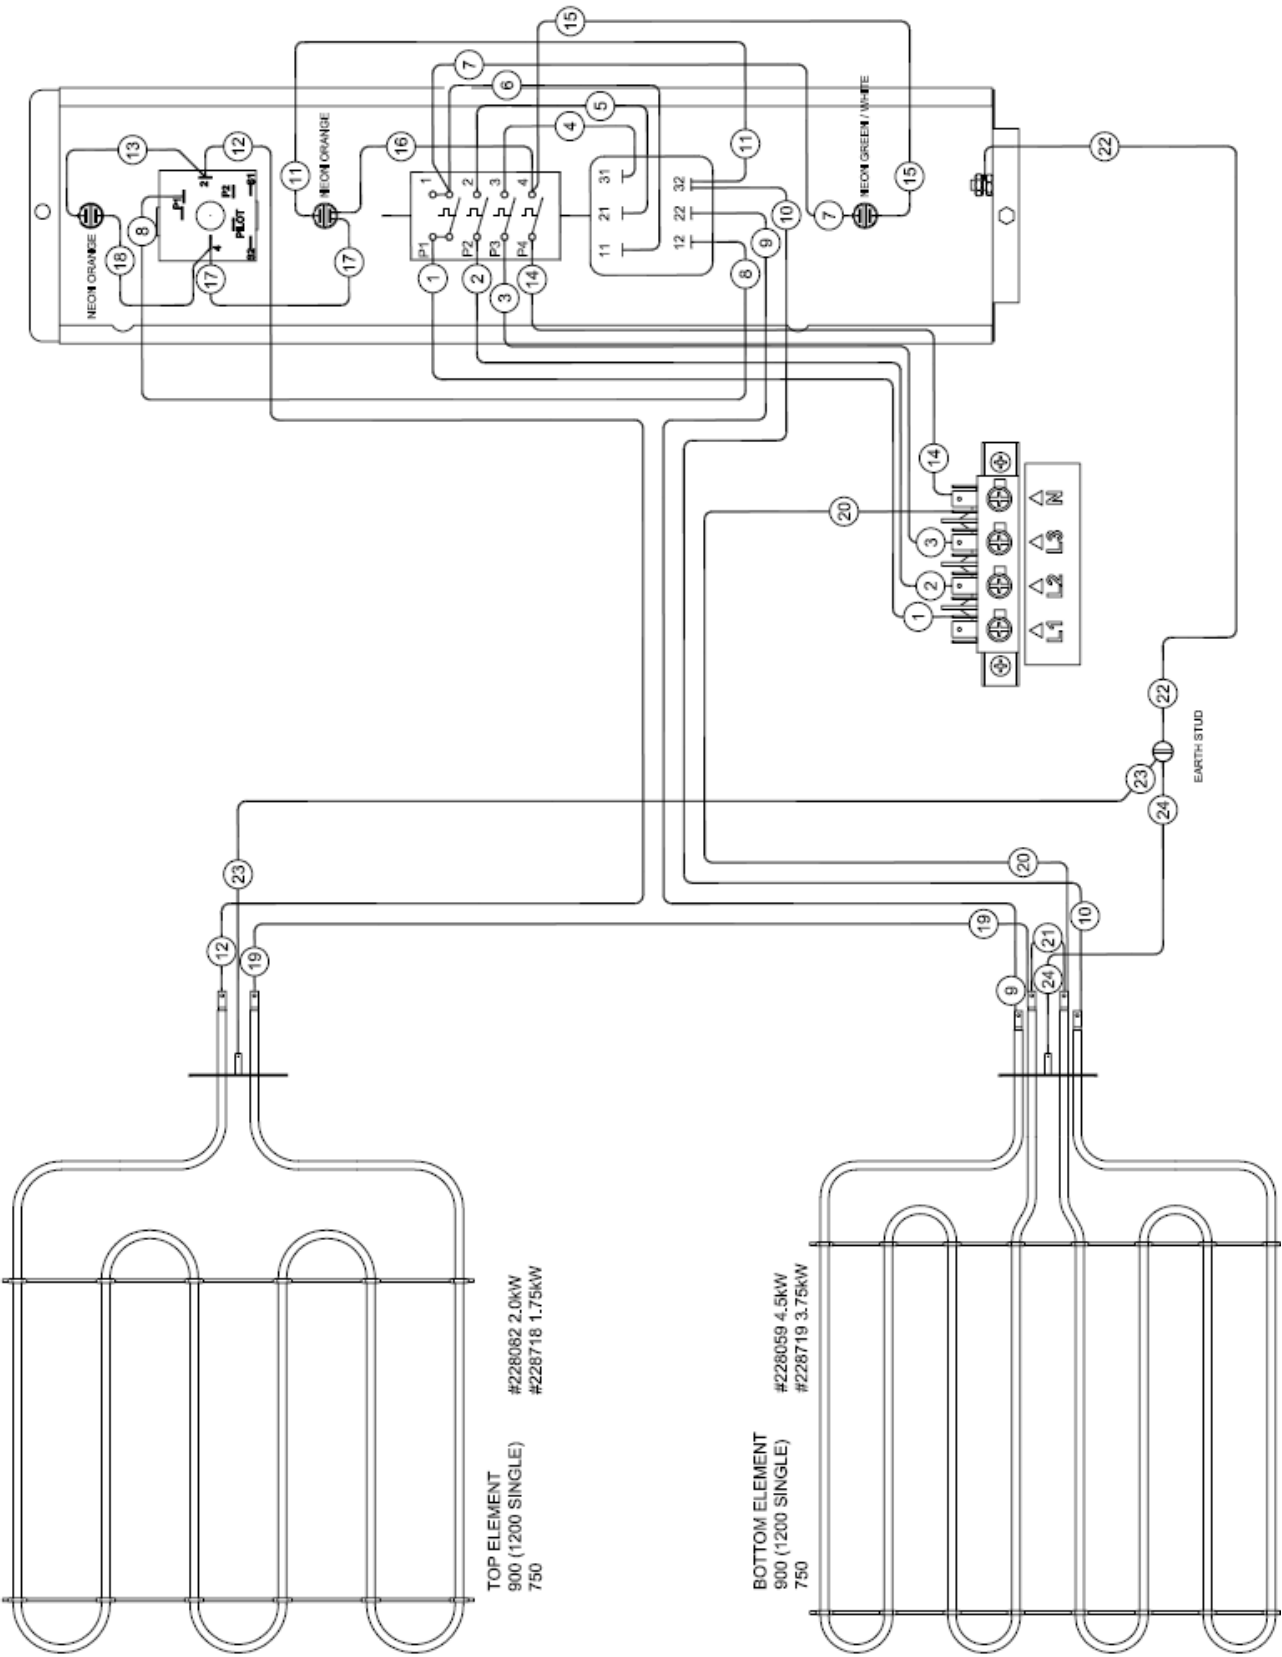

## Circuit Schematics

### GP8910EC (Convection Oven) Wiring Schematic

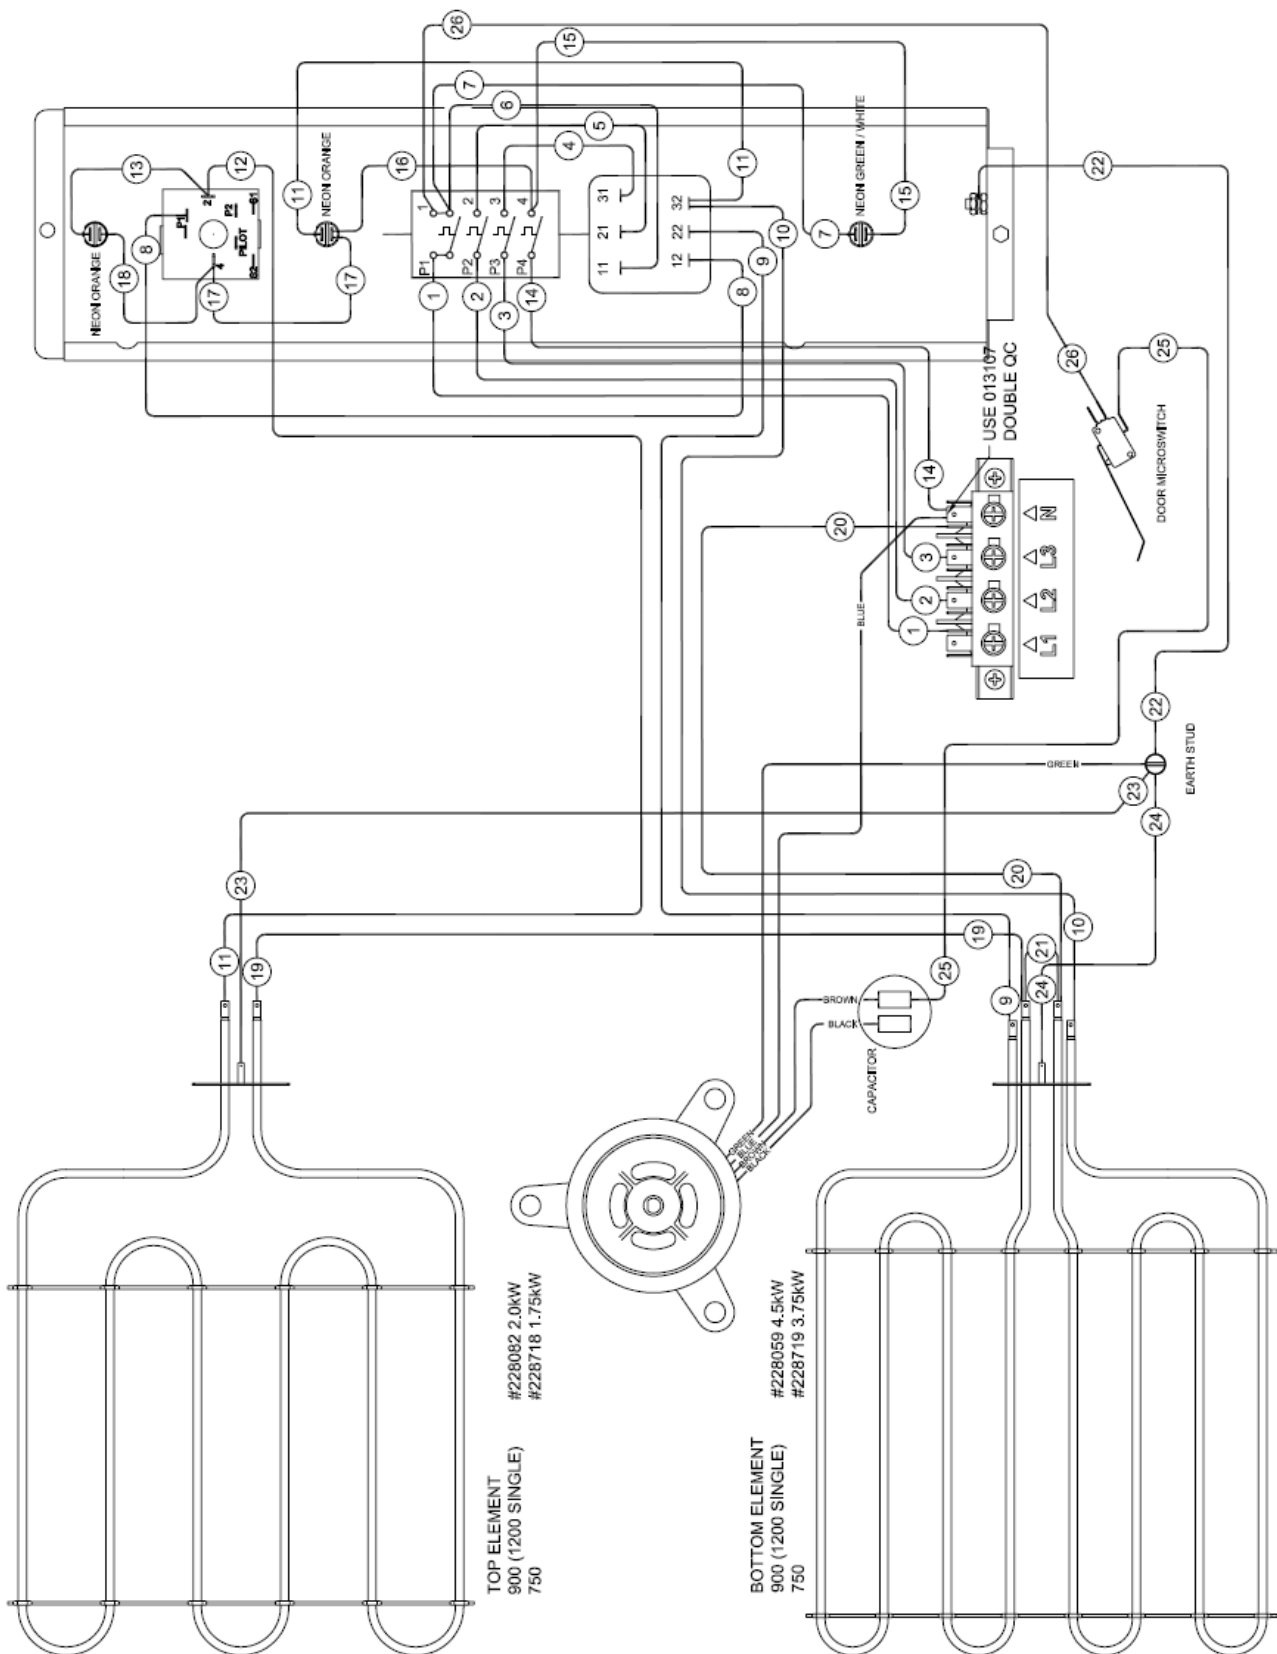

## Replacement Parts List

### **IMPORTANT:**

Only genuine authorized replacement parts should be used for the servicing and repair of this appliance. The instructions supplied with the parts should be followed when replacing components.

For further information and servicing instructions, contact your nearest authorized service branch (contact details are as shown on the reverse of the front cover of this manual).

When ordering replacement parts, please quote the part number and the description as listed below. If the part required is not listed below, request the part by description and quote model number and serial number which is shown on the rating plate.

### **Griddle**

227399	Control Knob - 50°C to 300°C.
229146	Thermostat - 50°C to 300°C.
229353	Overtemp 360°C, 3 Pole.
229145	Switch 4 Pole.
227962	Neon Green.
227963	Neon Amber.
228571	Index Mark Moulding.
229245	Element 2000W.
228400	Grease Drawer.
229224	Control Panel Hinge.

### **Griddle Plate Options**

<b>Griddle Plate</b>	<b>Standard</b>	<b>Chromed (-C)</b>	<b>Ribbed</b>
900 mm	229248	229270	ON REQUEST, Various options (depending on ribbed section width on LH or RH side).

### **Oven**

228082	Oven Top Element 2kW.
228059	Oven Bottom Element 4.5kW.
228704	Door Spring Kit.
026160	Terminal Block Mains.
227399	Control Knob - 50°C to 300°C.
229146	Thermostat - 50 - 300°C.
229145	Switch (4-pole).
227962	Neon Green.
227963	Neon Amber.
013989	Energy Regulator.
227398	Control Knob HI/LO Heat.

### **Convection Oven Only**

228938	Oven Door Microswitch.
010909	Motor Capacitor 4µf.
228116	Fan.
019479	Motor.

## Replacement Parts List

---

### General

227892	Side Rack LH.
227893	Side Rack RH.
227896	Oven Rack.
228571	Index Mark Moulding.
227850	Leg 150 mm (Adjustable).

### Accessories

228566	Griddle Scraper Tool.	
228567	Smooth Plate Scraper Blades	(Pack of 2 blades).
233817	Ribbed Plate Scraper Blade	(Individual Blade).
228799	900 mm Plinth Kit.	
229674	Rear Roller Assy.	

